



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	96020A	6 WIRING HARNESS	1		
2		26079A	2 PLATE	1		
3	10	15001	SCREW	4		
4		98493A	2 BRACKET	1		
5	23	92152	SPACER	6		
6	11	64015	NUT	6		
7	23	806981	SPACER	3		
8	12	35462	WASHER	3		
9		15248A	1 IGNITION MODULE	1		
10	84	15275A	1 HARNESS ASSEMBLY	1		
11		97257A	1 WATER TEMPERATURE SENDEI	1		
11		49734A	1 WATER TEMPERATURE SENDEI	1	OPT (DUAL STATION)	7
12		815425	1 OIL PRESSURE SENDER	1		
12		37293	1 OIL PRESSURE SENDER	1	OPT (DUAL STATION)	7
13	13	26996	LOCKWASHER	2		
14	11	68219	NUT	2		
15	22	48556	BUSHING	1		
16	22	42554	NIPPLE	1		
17	22	46932	ELBOW	1		
18		818384	1 BRACKET	1		
19	16	64281	STUD	1		
20	13	35048	LOCKWASHER	1		
21	11	46335	NUT	1		
22	10	47462	SCREW	1		
23	13	32993	LOCKWASHER	1		
24	88	11178	CIRCUIT BREAKER	1		
25	13	26996	LOCKWASHER	2		
26	11	68219	NUT	2		
27	10	45862	SCREW (7/8 IN.)	2		
28	12	56681	WASHER	2		
29	11	61356	NUT	2		
30	85	96819T	INSULATOR	1		
31	89	96054	STARTER SOLENOID	1		
32	10	47910	SCREW (5/8 IN.)	2		
33	11	20088	NUT	2		
34	13	26992	LOCKWASHER	2		
35	11	26419	NUT (8-32)	2		
36	11	94330	NUT (1/4-20)	2		