



20106

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	50	864340A 2	STARTER ASSEMBLY	1	
2		NSS	NOT SOLD SEPARATE, Armatur	1	2
3		NSS	NOT SOLD SEPARATE, Brush H	1	2
4		NSS	NOT SOLD SEPARATE, Frame	1	2
5		NSS	NOT SOLD SEPARATE, Screw	2	2
6		NSS	NOT SOLD SEPARATE, Thru-Bc	2	2
7		NSS	NOT SOLD SEPARATE, Shaft ar	1	2
8		NSS	NOT SOLD SEPARATE, Gaski	1	2
9		NSS	NOT SOLD SEPARATE, Gear	1	2
10		NSS	NOT SOLD SEPARATE, Drive	1	2
11		33291	COLLAR	1	
12	53	33290	RING, Retaining	1	
13		NSS	NOT SOLD SEPARATE, Thrus	1	2
14		809459	HOUSING	1	
15	23	814476	BUSHING	1	
16		NSS	NOT SOLD SEPARATE, Gromme	1	2
17		809463A 1	SOLENOID KIT	1	
18		NSS	NOT SOLD SEPARATE, Lever	1	2
19		NSS	NOT SOLD SEPARATE, Screw	3	2
20	10	805343 2	SCREW, (.375-16 x 4.33)	2	
21	11	806949	NUT, (M8-1.5)	1	
22	11	40021 1	NUT, (M5)	1	
23	13	40024 7	LOCKWASHER, (M8)	1	
24	13	26996	LOCKWASHER, (#10)	1	
25	85	79695	BOOT, Insulator (Black)	1	
26	88	79023A91	FUSE ASSEMBLY, (90 Ampere)	1	
27	11	826711 9	NUT, (.250-28)	1	