



A = TO FUEL PRESSURE REGULATOR
 B = TO FUEL PUMP

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		89876A 3	BASE ASSEMBLY	1		
2	22	816133 1	FITTING	1		
3	22	32561	PLUG-PIPE (1/4 IN.)	1		
4	35	807172	FILTER-FUEL/WATER SEPARATI	1		
5	22	33821	FITTING	1		
6	22	808003	FITTING	1		
7	22	807958	FITTING-INLET	1		
8	22	46982	FITTING-ELBOW (90 DEG.)	1		
9		807956T	INSULATOR-BACK	1		
10		807806T	INSULATOR-CAP	1		
11		807807T	INSULATOR-BASE	1		
12		807918T 1	BRACKET	1		
13	11	45592	NUT (5/16-24)	2		
14	11	860069	NUT (3/8-16)	2		
15	32	807953T	FUEL LINE-FUEL PUMP TO FILTE	1		
16	32	807954T	FUEL LINE-FUEL REGULATOR T(1		