


Parts List

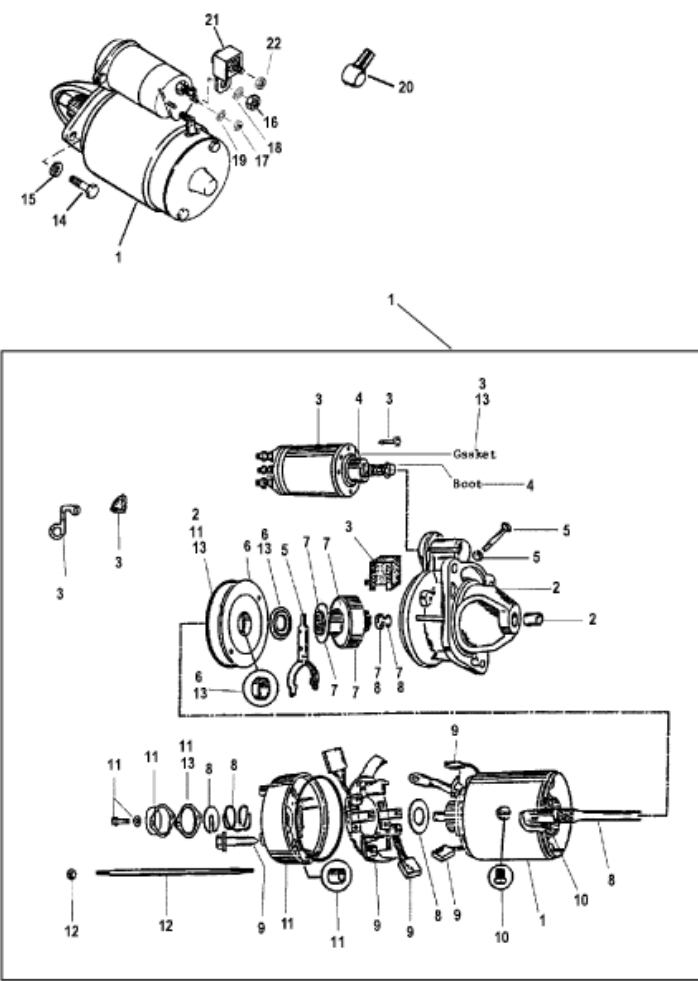

Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	808011A 1	STARTER ASSEMBLY	1		
2		850401	DRIVE HOUSING	1		
3	89	850408	SOLENOID	1		
4		NSS	NOT SOLD SEPARATE, Plunger	1		2
5		NSS	NOT SOLD SEPARATE, Shift Le	1		2
6		NSS	NOT SOLD SEPARATE, Center E	1		2
7		850402	DRIVE KIT	1		
8		NSS	NOT SOLD SEPARATE, Armatur	1		2
9		850404	HOLDER KIT	1		
10		NSS	NOT SOLD SEPARATE, Field Cc	1		2
11		NSS	NOT SOLD SEPARATE, C.E. Fre	1		2
12	10	850407	BOLT	2		
13		NSS	NOT SOLD SEPARATE, Sealing	1		2
14	10	47462	SCREW, (.437-14 x 1.250)	2		
15	13	32993	LOCKWASHER, (.437)	2		
16	11	15874	NUT, (M10)	1		
17	11	40021	NUT, (M5)	1		
18	13	32993	LOCKWASHER, (.437)	1		
19	13	26996	LOCKWASHER, (#10)	1		
20	85	79695	BOOT, Insulator (Black)	1		
21	88	79023A91	FUSE ASSEMBLY, (90 Ampere)	1		
22	11	826711	NUT, (.250-28)	1		