



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		805597T	BRACKET	2	(REAR)	
2	10	37269	SCREW (7/16-14 x 2 in.)	4		
3	13	32993	LOCKWASHER (7/16 in.)	4		
4	10	57357	SCREW (7/16-14 x 2-1/4 in.)	2		
5	13	32993	LOCKWASHER (7/16 in.)	2		
6	11	29553	NUT (7/16-14)	2		
7		71128A	BRACKET	2	(FRONT)	
8	10	68101	SCREW (3/8-16 x 1-3/8 in.)	6		
9	13	35048	LOCKWASHER (3/8 in.)	6		
10	10	57357	SCREW (7/16-14 x 2-1/4 in.)	2		
11	13	32993	LOCKWASHER (7/16 in.)	2		
12	11	29553	NUT (7/16-14)	2		
13		66166A	4 TRUNNION	4		
14	13	68102	LOCKWASHER (3/4 in.)	4		
15		66284A	2 BASE-Engine End	2	FRONT)	
16	11	20739	NUT-Jam (3/4-16)	2		
17	14	66658	WASHER-Tab	2		
18		816326A	2 BASE-Transmission End	2	(REAR)	
19	11	816331	NUT-Jam (3/4-16)	2		
20	14	66658	WASHER-Tab	2		
21	11	20739	NUT-Jam (3/4-16)	4		
22	54	78945	J-CLAMP	1		