



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	72550A 1	STARTER MOTOR ASSEMBLY(MCI)	1		
1	50	88671A 1	STARTER MOTOR ASSEMBLY (IP)	1		
2	10	72875	SCREW, STARTER MOTOR ATT/	2		
3	12	34931	WASHER, STARTER MOTOR STI	1		
4	11	23161	NUT, STARTER MOTOR STUD	1		
5	13	26993	LOCKWASHER, STARTER MOTO	1		
6	11	29250	NUT, STARTER MOTOR TERMIN	1		
7		70398	BRACE, STARTER MOTOR TO C	1		
8	10	21077	SCREW, STARTER MOTOR BRAI	2		
9	12	34931	WASHER, STARTER MOTOR BR	2		
10	13	35048	LOCKWASHER, STARTER MOTO	2		
11		65057A 1	STARTER SOLENOID	2		
12	10	28635	SCREW, SOLENOID TO CYLINDE	2		
13	13	26992	LOCKWASHER, SOLENOID SCRE	2		
14		26901	BUMPER, SOLENOID	1		
15	13	26996	LOCKWASHER, SOLENOID TERN	2		
16	11	68219	NUT, SOLENOID TERMINAL(#10	2		
17	13	26993	LOCKWASHER, SOLENOID TERN	2		
18	11	20083	NUT, SOLENOID TERMINAL(5/1E	2		
19	84	77042	CABLE, SOLENOID TO STARTER	1		
20	85	79695	BOOT, INSULATOR - STARTER S	1		
21	84	86675A 2	WIRING HARNESS(MCM)	1	SERIAL 00000000-05873488	
21	84	93178A 1	WIRING HARNESS(MCM)	1	SERIAL 05873489-09999999	
21	84	89231A 1	WIRING HARNESS(INBOARD)	1		
22		26079	PLATE, HARNESS ATTACHING	1		
23	10	46718	SCREW, PLATE TO BRACKET(3/	4		
24	54	64235 1	"J" CLIP, WIRING HARNESS	3		
25	10	20031	SCREW, WIRING HARNESS CLAI	1		
26	13	26992	LOCKWASHER, WIRING HARNE	1		
27	54	73668	"J" CLIP, WIRING HARNESS TO	1		
28	10	26801	SCREW, CLIP TO INTAKE MANIF	1		
29		34623	SENDING UNIT, OIL PRESSURE	1		
30		38559	SWITCH, OIL PRESSURE(INBOAF	1		
31	11	68219	NUT, SWITCH AND SENDING UN	2		
32	13	26996	LOCKWASHER, SWITCH AND SE	2		
33		99502A 8	VOLTAGE REGULATOR	1		
34	10	27337	SCREW, VOLTAGE REGULATOR	2		
35	13	26992	LOCKWASHER, VOLTAGE REGU	2		
36	10	28464	SCREW, VOLTAGE REGULATOR	1		
37	13	58643	LOCKWASHER, VOLTAGE REGU	1		
38	11	68219	NUT, VOLTAGE REGULATOR TE	5		