



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66417	BRACKET, MOUNTING - TRANSMI	2		
2	10	37269	SCREW, BRACKET TO TRANSMI	4		
3	13	32993	LOCKWASHER, BRACKET SCRE	4		
4	10	57357	SCREW, CLAMPING - MOUNTING	2		
5	13	32993	LOCKWASHER, CLAMPING SCRE	2		
6	11	29553	NUT, CLAMPING SCREW	2		
7		77935	BRACKET, MOUNTING - ENGINE	1		
8	10	78259	SCREW, MOUNTING BRACKET T	4		
9	13	32993	LOCKWASHER, MOUNTING BRA	4		
10	12	34567	WASHER, MOUNTING BRACKET	4		
11	10	32695	SCREW, CLAMPING - MOUNTING	2		
12	12	34567	WASHER, CLAMPING SCREW	4		
13	11	34933	NUT, CLAMPING SCREW	2		
14		66166	TRUNNION, ADJUSTING - MOUN	4		
15	13	68102	LOCKWASHER, MOUNTING BRA	4		
16		79473	BASE, ENGINE MOUNT	4		
17	11	20739	NUT, JAM - ENGINE MOUNT BA	8		
18	14	66658	TAB WASHER, BASE NUT	4		