



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		94985A	FLYWHEEL HOUSING ASSEMBLY	1		
2	23	99322	SPACER, RUBBER MOUNT	2		
3		99297A	MOUNT, RUBBER	2		
4	10	37612	SCREW, FLYWHEEL HOUSING (1	5		
5	13	35048	LOCKWASHER, FLYWHEEL HOU	5		
6	16	64066	STUD, FLYWHEEL HOUSING	1		
7	13	35048	LOCKWASHER, FLYWHEEL HOU	1		
8	11	32219	NUT, FLYWHEEL HOUSING STUI	1		
9	84	62826A	WIRE, FLYWHEEL HOUSING STL	1		
10		95026A	COVER, FLYWHEEL HOUSING	1		
11	27	94976	GASKET, FLYWHEEL HOUSING	1		2
12	10	26065	SCREW, COVER TO FLYWHEEL H	4		
13	11	29250	NUT, COVER TO FLYWHEEL HO	4		
14	54	61001	CLAMP, SHIFT CABLE ATTACHIN	1		
15		45915	TERMINAL BLOCK	1		
16	10	20189	SCREW, TERMINAL BLOCK TO FL	1		
17	11	27164	NUT, TERMINAL BLOCOK SCREW	1		
18	10	62568	SCREW, LEAD ATTACHING TO T	1		
19		43182	BRACKET, CIRCUIT BREAKER	1		
20	10	22524	SCREW, CIRCUIT BREAKER BRA	2		
21	11	56374	NUT, CIRCUIT BREAKER BRACKI	2		
22	88	78813	CIRCUIT BREAKER (50AMP)	1		
23	10	45862	SCREW, CIRCUIT BREAKER TO E	2		
24	11	46438	NUT, CIRCUIT BREAKER SCREW	2		
25	13	26996	LOCKWASHER, CIRCUIT BREAKI	2		
26	11	68219	NUT, CIRCUIT BREAKER TERMIN	2		
27	10	85486	SCREW, GROUND WIRE TO TRA	1		