



| Parts List | | | | | | |
|------------|-------|----------|------------------------------|-----|--------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 456 | 6092 | CRANKSHAFT | 1 | | |
| 2 | | 68700 | SPROCKET, CRANKSHAFT | 1 | | |
| 3 | | 67382 | KEY, SPROCKET AND ALTERNA | 2 | | |
| 4 | 398 | 6231A 6 | STATOR ASSMEBLY, ALTERNAT | 1 | | |
| 5 | 10 | 77363 | SCREW, STATOR TO FRONT CO | 5 | | |
| 6 | 13 | 26996 | LOCKWASHER, STATOR TO COV | 5 | | |
| 7 | 54 | 73667 | "J" CLIP, ALTERNATOR LEAD AT | 1 | | |
| 8 | | 93009A 1 | ALTERNATOR ASSEMBLY, FLYW | 1 | | |
| 9 | 10 | 59644 | SCREW, ALTERNATOR ASSEMB | 1 | | |
| 10 | 12 | 36103 | WASHER, ALTERNATOR ASSEM | 1 | | |
| 11 | 251 | 7714 | FLYWHEEL | 1 | | |
| 12 | 16 | 32808 | STUD, FLYWHEEL TO COUPLING | 6 | | |
| 13 | | 69354A 2 | COUPLING ASSEMBLY | 1 | | |
| 14 | 12 | 32648 | WASHER, FLYWHEEL TO COUPL | 6 | | |
| 15 | 11 | 34933 | NUT, FLYWHEEL TO COUPLING | 6 | | |
| 16 | 10 | 74335 | SCREW, MAIN BEARING CAPS | 10 | | |
| 17 | | 68750 | SEAL, REAR BEARING CAP | 2 | | |
| 18 | | 74313A 1 | MAIN BEARING ASSEMBLY (STD | 4 | WHEN ORDERIING REPLACEME | |
| 18 | | 74313A 2 | MAIN BEARING ASSEMBLY (.002 | AR | WHEN ORDERIING REPLACEME | |
| 18 | | 74313A 4 | MAIN BEARING ASSEMBLY (.010 | AR | WHEN ORDERIING REPLACEME | |
| 18 | | 74313A 3 | MAIN BEARING ASSEMBLY (.020 | AR | WHEN ORDERIING REPLACEME | |
| 19 | | 74314A 1 | CENTER MAIN BEARING ASSY (.1 | 1 | WHEN ORDERIING REPLACEME | |
| 19 | | 74314A 2 | CENTER MAIN BEARING ASSY (.1 | AR | WHEN ORDERIING REPLACEME | |
| 19 | | 74314A 4 | CENTER MAIN BEARING ASSY (.1 | AR | WHEN ORDERIING REPLACEME | |
| 19 | | 74314A 3 | CENTER MAIN BEARING ASSY (.1 | AR | WHEN ORDERIING REPLACEME | |