



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	72550A 1	STARTER ASSEMBLY	1		
2	10	72875	SCREW, STARTER ATTACHING	2		
3	12	34931	WASHER, STARTER STUD	1		
4	11	23161	NUT, STARTER STUD	1		
5	13	26993	LOCKWASHER, STARTER TERM	1		
6	11	29250	NUT, STARTER TERMINAL	1		
7		70398	BRACE, STARTER TO CYLINDER	1		
8	10	21077	SCREW, STARTER BRACE TO C	2		
9	12	34931	WASHER, STARTER BRACE SCF	2		
10	13	35048	LOCKWASHER, STARTER BRACI	2		
11		65057A 1	STARTER SOLENOID	1		
12	10	28635	SCREW, SOLENOID TO CYLINDE	2		
13	13	26992	LOCKWASHER, SOLENOID TO C	2		
14		26901	BUMPER, SOLENOID	1		
15	13	26996	LOCKWASHER, SOLENOID TERM	2		
16	11	68219	NUT, SOLENOID TERMINAL (#19	2		
17	13	26993	LOCKWASHER, SOLENOID TERM	2		
18	11	20083	NUT, SOLENOID TERMINAL (5/1)	2		
19	84	77042	CABLE, SOLENOID TO STARTER	1		
20	84	86675A 2	WIRING HARNESS (SERIAL #58C	1		
20	84	93178A 1	WIRING HARNESS (SERIAL #58C	1		
21		26079	PLATE, HARNESS ATTACHING	1		
22	10	46718	SCREW, PLATE TO BRACKET (3/	4		
23	54	64235 1	"J" CLIP, WIRING HARNESS	3		
24	10	20031	SCREW, WIRING HARNESS CLAI	1		
25	13	26992	LOCKWASHER, WIRING HARNE	1		
26	54	73668	"J" CLIP, WIRING HARNESS TO I	1		
27	10	26801	SCREW, CLIP TO INTAKE MANIFI	1		
28		34623	SENDING UNIT, OIL PRESSURE	1		
29	11	68219	NUT, SENDING UNIT TERMINAL	1		
30	13	26996	LOCKWASHER, SENDING UNIT	1		
31	85	79695	BOOT, INSULATOR STARTER CA	1		
32		99502A 8	VOLTAGE REGULATOR ASSEMB	1		
33	10	27337	SCREW, VOLTAGE REGULATOR	2		
34	13	26992	LOCKWASHER, VOLTAGE REGU	2		
35	10	28464	SCREW, VOLTAGE REGULATOR	1		
36	13	58643	LOCKWASHER, VOLTAGE REGU	1		
37	11	68219	NUT, STATOR LEADS TO VOLTA	5		
38	84	92700A 1	JUMPER WIRE, VOLTAGE REGU	1		