



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-		55642A13	CONTROL PANEL ASSEMBLY, CC	1		
1		55642A1	PANEL ASSEMBLY, CONTROL	1		
2	16	55422	STUD, CONTROL PANEL TO B	4		
3	12	24676	WASHER, CONTROL PANEL S	4		
4	11	27164	NUT, CONTROL PANEL STUD	4		
5		55738A1	SWITCH, PUSH BUTTON-CONT	3		
6		48078	JUMPER WIRE (RED-3 1/4")-J	1		
7	84	69174A2	WIRE (RED-24")	2		
8	88	69358A1	CAP ASSEMBLY, FUSE HOLDE	1		
9	88	79091	FUSE (20 AMP)	1		
10		53107	JUMPER WIRE (PURPLE-3")	1		
11		55641	RETAINER, PUSH BUTTON SW	1		
12	10	62568	SCREW, SWITCH RETAINER T	4		
13	84	87394A20	HARNES, CONTROL PANEL	1		
14		33865	BINDER, NYLON-CONTROL PA	1		
15	54	46770	CLAMP, HARNES ATTACHING	1		
16	10	29227	SCREW, HARNES ATTACHING	1		
17	11	34388	NUT, HARNES ATTACHING CI	1		
18		52752	JUMPER WIRE, STARTER SOLE	1		
19		45551	BATTERY LEAD (POSITIVE) 18"	OPT.		
19		45552	BATTERY LEAD (NEGATIVE) 18"	OPT.		
19	84	79139A9	BATTERY LEAD (POSITIVE) 72"	OPT.		
19	84	79138A1	BATTERY LEAD (NEGATIVE) 72"	OPT.		
20	84	93542A1	WIRING HARNES, HYDRAULIC	1		
21	84	74023A1	CONNECTOR AND HARNES (US	1		
21	84	79147A1	CONNECTOR AND HARNES (US	1		
22		45559	TERMINAL BLOCK, HYDRAULIC	1		
23	10	35519	SCREW, TERMINAL BLOCK TO H	1		
24	10	48409	SCREW, HARNES LEADS TO TE	2		
25	89	68258	STARTER SOLENOID	1		
26	13	26396	LOCKWASHER, STARTER SOLE	2		
27	11	68219	NUT, STARTER SOLENOID TER	2		
28	13	26393	LOCKWASHER, STARTER SOLE	2		
29	11	68292	NUT, STARTER SOLENOID TER	2		
30		46265	BOOT, RUBBER-STARTER SOLE	2		
31	10	69052	SCREW, STARTER SOLENOID TI	2		
32	13	26392	LOCKWASHER, STARTER SOLE	2		
33	11	21825	NUT, STARTER SOLENOID SCRE	2		
34		74407	BRACKET, MOUNTING-STARTE	1		
35	10	21140	SCREW, MOUNTING BRACKET T	2		
36	12	26392	LOCKWASHER, MOUNTING BRAC	2		