



9798

| Parts List |       |           |                         |     |         |          |
|------------|-------|-----------|-------------------------|-----|---------|----------|
| Ref        | Class | Part      | Description             | Qty | Comment | Footnote |
| 1          | 50    | 863007A 1 | STARTER MOTOR ASSEMBLY  | 1   |         |          |
| 2          |       | 809463A 1 | SOLENOID KIT, Starter   | 1   |         |          |
| 3          |       | 805343 2  | SCREW, (.375-16 x 4.33) | 2   |         |          |
| 4          |       | 806949    | NUT, (M8-1.5)           | 1   |         |          |
| 5          |       | 806949    | NUT, (M8-1.5)           | 1   |         |          |
| 6          |       | 26996     | LOCKWASHER, (#10)       | 1   |         |          |
| 7          |       | 79695     | BOOT, Insulator (Black) | 1   |         |          |
| 8          |       | 79023A91  | FUSE, (90 Amp)          | 1   |         |          |
| 9          |       | 826711 9  | NUT, (.250-28)          | 1   |         |          |
| 10         |       | 40024 7   | LOCKWASHER, (M8)        | 1   |         |          |
| 11         |       | NSS       | NOT SOLD SEPARATE, BOLT | 1   |         |          |
| 12         |       | 40021 1   | NUT, (M5)               | 2   |         |          |