



19888

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A32	WATER PUMP ASSEMBLY	1	(Use with Steel Water Pump Pulley)	
1	46	72774A50	PUMP ASSEMBLY, Seawater	1	(Use with Cast Aluminum Water Pl)	
2	46	72774A40	BODY, WATER PUMP	1		
3		87631A 1	COVER, WATER PUMP	1		
4	10	73275	SCREW, (.312-18 x 2.88), WATE	2		
4	10	52743	SCREW, (.312-18 X 3.75), WATE	3		
5	12	20084	WASHER, (.328 x .562 x .062), C	5		
6	27	94915	GASKET, COVER TO OUTER W	1		
7		94916	WEAR PLATE, OUTER	1		
8	27	94914	GASKET, BODY TO WEAR PLA	2		
9	19	59504	PLUG, IMPELLER	1		
10	47	59362	IMPELLER	1		
11	28	56662	KEY, IMPELLER DRIVE	1		
12		94576	WEAR PLATE, INNER	1		
13	25	94288	QUAD RING, PUMP HOUSING	1		
14	46	94913A 1	HOUSING ASSEMBLY	1	(Use with Steel Water Pump Pulley)	
14	46	94913A 2	PUMP HOUSING ASSEMBLY	1	(Use with Cast Aluminum Water Pl)	
15	26	90562	SEAL, (1.254 Outside Diameter)	2		
16	30	72961	BEARING, Ball, WATER PUMF	2		
17		59501A 1	SHAFT	1		
18	53	23720	RING, Retaining, BALL BEARI	1		
19	26	72785	SEAL, WATER PUMP SHAFT	1		
20		47530	HUB, WATER PUMP PULLEY	1		
21		73798A 1	PULLEY, WATER PUMP	1	(Steel)	
21		52822T	PULLEY	1	(Aluminum)	
22	10	47277	SCREW, (.312-24 x .750), PULLEY	4		
23	13	39107	LOCKWASHER, (.312), PULLEY S	4		
24	13	39107	LOCKWASHER, (.312), WATER PI	3		
25	11	21908	NUT, (.312-18), WATER PUMP SC	3		
26		89535T	BRACKET, WATER PUMP	1		
27	10	34353	SCREW, (.375-16 x 1.00), WATER	2		
28	13	35048	LOCKWASHER, (.375), WATER PI	2		
29	12	34714	WASHER, WATER PUMP BRACK	1		
30		89609	BRACE, WATER PUMP ADJUSTI	1	(Use with Steel Water Pump Pulley)	
30		89609 1	BRACE	1	(Use with Cast Aluminum Water Pl)	
31	10	26487	SCREW, (.375-16 x 1.12), ADJUST	1		
32	13	35048	LOCKWASHER, (.375), ADJUSTIN	1		
33	12	34714	WASHER, ADJUSTING BRACE S	1		
34	10	35786	SCREW, (.375-24 x 1.00), ADJUST	1		
35	13	35048	LOCKWASHER, (.375), ADJUSTIN	1		
36	11	24882	NUT, ADJUSTING BRACE SCREW	1		