


84-806656A6

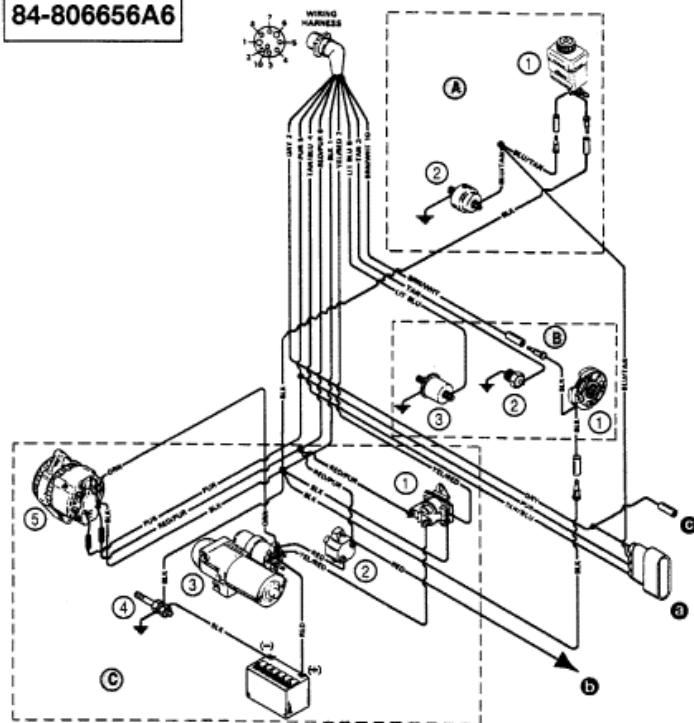

A - Audio Warning System

- 1 - Drive Unit Oil Level
- 2 - Oil Pressure Switch

B - Instrumentation System

- 1 - Tirm Sender
- 2 - Water Temperature Sender
- 3 - Oil Pressure Sender

C - Charging and Starting System

- 1 - Starter Slave Solenoid
- 2 - Circuit Breaker
- 3 - Starter
- 4 - Ground Stud
- 5 - Alternator

A - Charging and Starting Circuit

- B - Audio Warning/Power Reduction Circuit
- C - Instrumentation Senders

- a - Harness Connector to EFI System Harness
- b - Positive (+) Power Wire to EFI System Harness
- c - Auxiliary Tachometer Lead

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote