



1907

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		863077T	ALTERNATOR ASSEMBLY, Black	1	(Service Complete Assembly)	
2	11	40021	NUT, (M6)	2		
3		807750T	BRACE	1		
4	10	98261	SCREW, (.375-16 x .750)	1		
5	13	35048	LOCKWASHER, (.375)	1		
6	10	40001134	SCREW, (M8 x 25)	1		
7		862051T	BRACKET, Alternator and Lifting E,	1	(Inline)	
7		864558	2 BRACKET, Alternator and Lifting E,	1	(V-Drive)	
8	10	862058T	BRACE, Alternator	1		
9	16	862615	STUD, (.375-16 x 2.25)	3		
10	11	32219	NUT, (.375-16)	3		
11	10	828213	SCREW, (.312-18 x 1.500)	2		
12	12	57792	WASHER	2		
13	11	859119	NUT, (.312-18)	2		
14		865193	BUSHING	3		
15		807757T	PULLEY ( 3 Inch Diameter )	2		
16	11	859135	NUT, (.437-20)	2		
17		807753T	1 BRACKET, Idler	1		
18	11	32219	NUT, (.375-16)	3		
19	10	816601	SCREW, (.437-20 x 1.500)	1		
20		807767T	BRACKET, Idler Adjustment	1		
21	10	98261	SCREW, (.375-16 x .750)	1		
22	11	29250	NUT, (.312-24)	1		
23	43	818381	2 PINION STUD	1		
24	12	20084	WASHER, (.328 x .562 x .062)	1		
25		864625T	PULLEY (4.25 Inch Diameter)	1		
26	57	865423005	BELT, Serpentine	1		
27		864545	BRACKET, Remote Oil	1	(V-Drive)	
28	10	98261	SCREW, (.375-16 x .750)	2		