



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		90747A27	DISTRIBUTOR	1		1
1		805185A26	DISTRIBUTOR	1		2
2		805759A 2	CAP	1		
3	10	90926	SCREW	4		
4	27	805760	GASKET	1		
5		13524A 5	ROTOR/SENSOR WHEEL	1		
6	87	91019A 3	SENSOR ASSEMBLY	1		1
7	13	26996	LOCKWASHER	2		1
8	11	68219	NUT	2		1
9	87	91019A 6	SENSOR ASSEMBLY	1		2
10	10	66686	SCREW (1")	1		
10	10	72202	SCREW (1-1/4")	1		
11	43	818807	DRIVE GEAR	1		
12	17	47617	PIN	1		
13	23	90915	BUSHING	2		
14	27	34486 3	GASKET	1		1
15		52185	CLAMP	1		
16	10	806681	SCREW	1		
17	84	816761A 4	SPARK PLUG WIRE KIT	1		1
17	84	816761A17	SPARK PLUG WIRE KIT	1		2
18	85	63709A 1	BOOT ASSEMBLY	8		
19	33	59571	SPARK PLUG	8		
20		54676	RETAINER (2 WIRE)	2		
21		32783	RETAINER (3 WIRE)	2		
22	392	805570A 2	IGNITION COIL	1		
23		77294T	BRACKET	1		
24	10	41408	SCREW (1-1/2")	1		
25	13	26996	LOCKWASHER	2		
26	11	68219	NUT	2		
27	10	86750	SCREW (5/8")	2		
28	13	26996	LOCKWASHER	2		
29	12	20084	WASHER	2		
30	16	90096A 1	STUD ASSEMBLY	2		
31	54	72821	RETAINER	2		