



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		862031T	ALTERNATOR ASSEMBLY (65 Amp)	1	(Non Serviceable - Replace Comp)	
2	10	400212	NUT	1		
3	10	400011 34	SCREW	1		
4	10	828213	SCREW	2		
5	12	57792	WASHER	2		
6	11	26484	NUT	2		
7		862055T	BRACKET - Alternator Mounting	1		
8	10	98261	SCREW	2		
9		860065A 1	BRACKET - Reservoir Mounting	1		
10	10	98261	SCREW	6		
11	11	32219	NUT	2		
12		862056T	BRACKET	1		
13		862083T	BRACKET - Idler Adjusting	1		
14		818380T	BUSHING	1		
15	11	859135	NUT	1		
16	43	818381 2	PINION STUD	1		
17		807757T	PULLEY	1		
18	10	34353	SCREW	2		
19		862082T	BRACKET - Power Steering Brace	1		
20	10	400011 88	SCREW	1		
21		862778A 1	BRACKET - Alternator Brace	1	(Alpha)	
22	11	29250	NUT	1	(Alpha)	
23		862084T	BRACKET - Idler	1	(Bravo)	
24	11	32219	NUT	2	(Bravo)	
25		862085T	BRACKET - Idler Brace	1	(Bravo)	
26	16	860102	STUD	2	(Bravo)	
27		818382	PULLEY	1	(Bravo)	
28		818380T	BUSHING	1	(Bravo)	
29	10	56393	SCREW	1	(Bravo)	
30	11	859135	NUT	1	(Bravo)	
NS	84	862164T 1	HARNES - Wiring	1		
NS	57	862086 1	BELT - Serpentine	1	(Alpha)(P/S)	
NS	57	862088A 1	BELT - Serpentine	1	(Alpha)(CHS)	
NS	57	862087A 1	BELT - Serpentine	1	(Bravo /P/S)	
NS	57	862089A 1	BELT - Serpentine	1	(Bravo w/o P/S)	