



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	807229A	2 HARNESS	1	(5.7L ALPHA/BRAVO)	
1	84	806966A	2 HARNESS	1	(5.7LX ALPHA/BRAVO & 350 MAG)	
2		26079A	2 PLATE ASSEMBLY	1		
3	10	15001	SCREW	4		
4		805383T	MOUNTING BRACKET	1		
5	22	805328	1 ELBOW	1		
6		815425	OIL PRESSURE SENDER	1		
6		37293	OIL PRESSURE SENDER	OPT.	(DUAL STATION)	10
7		97257A	1 WATER TEMPERATURE SENDER	1		
7		49734A	1 WATER TEMPERATURE SENDER	OPT.	(DUAL STATION)	10
8	13	26996	LOCKWASHER	2		
9	11	68219	NUT	2		
10		805368T	MOUNTING BRACKET	1		
11	88	806950	CIRCUIT BREAKER	1	(50AMP)	
12	10	57583	SCREW (3/8")	2		
13	89	96158	STARTER SOLENOID	1		
14	10	805564	SCREW	2		
15	13	26992	LOCKWASHER (1/4)	2		
16	11	94330	NUT (1/4-20)	2		
17	13	26996	LOCKWASHER (#10)	2		
18	11	68219	NUT (10-32)	2		
19	85	97861	INSULATOR	1		
20	84	95084A	9 WIRE	1	BRAVO ENGINES	
21	88	79091	FUSE	1	BRAVO ENGINES	
22	84	95084A10	1 WIRE	1	BRAVO ENGINES	
23		806735T	BRACKET	1		
24	10	806834	SCREW	1	(FLATHEAD)	
25	10	806835	SCREW	1		
26		807264T	3 IGNITION CONTROL MODULE	1	(5.7L ALPHA)	
26		807645T	3 IGNITION CONTROL MODULE	1	(5.7L BRAVO)	
26		806957T	4 IGNITION CONTROL MODULE	1	(5.7LX ALPHA AND 350 MAGNUM)	
26		806956T	4 IGNITION CONTROL MODULE	1	(5.7LX BRAVO)	
27	10	806826	SCREW	2		
28		806611T	KNOCK CONTROL MODULE	1	5.7LX ALPHA/BRAVO 7 350 MAG	
29	10	806827	SCREW	2	5.7LX ALPHA/BRAVO 7 350 MAG	
30		806612T	KNOCK SENSOR	1	5.7LX ALPHA/BRAVO 7 350 MAG	
31	22	806705	Y-FITTING	1	5.7LX ALPHA/BRAVO 7 350 MAG	