



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A38	PUMP ASSEMBLY-Sea Water	1		
2	46	72774A89	BODY/IMPELLER KIT	1	(Sea Water Pump)	
3	27	805215	GASKET	1	(Cover To Outer Wear Plate)	
4	27	94914	GASKET	2	(Body To Wear Plate)	
5	47	59362	IMPELLER	1		
6	25	94288	QUAD RING	1	(Pump Housing)	
7		87631A	COVER KIT	1	(Sea Water Pump) (Also Includes 1	
8	12	20084	WASHER	5	(Cover Screw)	
9	10	73275	SCREW (.312-18 x 2.875)	5		
10		94916	WEAR PLATE-Outer	1		
11		94576	WEAR PLATE-Inner	1		
12	46	94913A	HOUSING ASSEMBLY	1	(Sea Water Pump)	
13	26	90562	SEAL-Oil	2	(Sea Water Pump Shaft)	
14	30	72961	BEARING-Ball	2	(Sea Water Pump Shaft)	
15		59501A	SHAFT	1	(Sea Water Pump)	
16	53	23720	RING-Retaining	1		
17	26	72785	SEAL-Oil	1	(Sea Water Pump Shaft)	
18		47530	HUB	1	(Sea Water Pump Pulley)	
19		73798	PULLEY (BLUE)	1	(Sea Water Pump)	
20	10	47277	SCREW (.312-24 x .750)	4		
21	13	39107	LOCKWASHER (.312)	4		
22	22	32802	PLUG-Pipe	1	(For Sea Water Pump Body)	
23	57	74271T	V BELT	1	(Sea Water Pump)	
24		47489	BRACKET	1	(Sea Water Pump)	
25	10	34354	SCREW (.375-16 x 1.500)	1		
26	13	35048	LOCKWASHER (.375)	1		
27	13	32993	LOCKWASHER (.437)	2		
28	12	27025	WASHER	1	(Bracket Screw)	
29	10	47462	SCREW (.437-14 x 1.00)	1	(Bracket To Block-Bottom)	
30	10	48948	SCREW (.437-14 x .875)	1	(Bracket To Block-Top)	
31	12	29330	WASHER	1	(For Slot)	
32		47544	BRACE-Water Pump	1		
33	10	34353	SCREW (.375-16 x 1.00)	1	(Brace To Oil Pan)	
34	13	35048	LOCKWASHER (.375)	1		
35	12	38622	WASHER	1	(Brace To Oil Pan)	
36	10	35786	SCREW (.375-24 x 1.00)	1		
37	13	35048	LOCKWASHER (.375)	1		
38	11	46335	NUT (.375-24)	1		