



- |                                   |                                     |                               |                          |
|-----------------------------------|-------------------------------------|-------------------------------|--------------------------|
| 23                                | 24                                  | 25                            | 26                       |
| VALVE KIT-RELIEF<br>(UP PRESSURE) | VALVE KIT-RELIEF<br>(DOWN PRESSURE) | VALVE KIT<br>(THERMAL RELIEF) | REPAIR KIT<br>(OVERHAUL) |

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		14336A20	PUMP/MOTOR ASSEMBLY	1	(Top Mounted Reservoir) (Design I)	
2		17649T	MOTOR ASSEMBLY (Complete)	1	(Design I - Small Manufacturing De	
3		17631A 1	BRUSH KIT	1		
4		17633	HOLDER KIT-Brush	1		
5	10	17621	SCREW	2		
6	25	17625	O RING	1		
7		17632T	END CAP ASSEMBLY	1	(With Bearing)	
8	10	17626	SCREW	4		
9		17622	COVER ASSEMBLY	1	(With Bearing)	
10		17624	FIELD AND FRAME ASSEMBL	1		
11	12	17653	WASHER-Thrust	2		
12		17623	ARMATURE	1		
13	10	823444	SCREW	2		
14		808728T	ADAPTOR ASSEMBLY	1		
15		803852	COUPLING	1		
16	25	89498	O RING	1	(Motor End)	
17		18529	PUMP ASSEMBLY	1	(Includes Screws)	
18	35	89496	FILTER	2		
19	25	17645	O RING	1	(Reservoir End)	
20		883166A 2	RESERVOIR KIT	1	(With Filters-Ref 18 And O Ring-Rc	
21	36	861597	CAP-Oil Reservoir	1		
22	10	883167	SCREW (#8-32)	4		
23		812498A 1	VALVE KIT-Relief	1	(Up Pressure)	
24		812499A 1	VALVE KIT-Relief	1	(Down Pressure)	
25		95353A 1	VALVE KIT	1	(Thermal Relief)	
26		18545A 1	VALVE KIT	1	(Overhaul)	