



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		815425T	SENDER ASSEMBLY-Oil Pressure	1	(Lower Oil Adapter) (Audio)	
1		37293T	SENDER ASSEMBLY-Oil Pressure	OPT	(Dual)	
2	13	26996	LOCKWASHER (#10)	1		
3	11	68219	NUT (#10-32)	1		
4	22	64013	REDUCER	1		
5	22	35580	FITTING (90 Degree)	1		
6		816492A	ALARM KIT	1		
7		56762	CABLE TIE (4.00 Inch)	1		
8		48952	SENDER ASSEMBLY-Water Temp	1	(Intake Manifold) (Audio)	
9	13	26996	LOCKWASHER (#10)	1		
10	11	45076	NUT (#10-32)	1		
11	87	805605A	SENDER ASSEMBLY-Oil Pressure	1	(Back Of Lower Oil Adapter)	
12	13	26996	LOCKWASHER (#10)	1		
13	11	68219	NUT (#10-32)	1		
14		805544T	SENSOR ASSEMBLY-Knock	1		
15		97257A	SENDER ASSEMBLY-Water Temp	1	(Thermostat Housing)	
15		49734	SENDER ASSEMBLY-Water Temp	OPT	(Dual)	
16	13	26996	LOCKWASHER (#10)	1		
17	11	68219	NUT (#10-32)	1		
18		849363	SENDER ASSEMBLY-Oil Temporal	1	(Front Of Lower Oil Adapter)	
18		850367	SENDER ASSEMBLY-Oil Temporal	OPT	(Compatible With Gafrig Gauges)	
19	13	26996	LOCKWASHER (#10)	1		
20	11	45076	NUT (#10-32)	1		
21	22	64013	REDUCER	1		
22	87	94009	SWITCH-Choke	1		
23	84	848879A	CABLE ASSEMBLY	1	(Sender To Choke)	