



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	99418A2	STARTER ASSY	1	(BRAVO PLUG-IN) (3.500 IN. DIA)	1
1	50	806964A 3	STARTER ASSY	1	(BRAVO PLUG-IN) (2.875 IN. DIA)	
2	10	805343 2	SCREW-Special	2		
3		89057	BRACE-(3.500 In. Starter)	1		
4	12	29245	WASHER-(3.500 In. Starter)	2		
5	11	56374	NUT (10M) (3.500 In. Starter)	1		
6	10	35765A 1	SCREW & WASHER (.312-18 x .62)	1		
7	22	32561 1	PLUG-(3.500 In. Starter)	1		
8	11	40021 1	NUT (5M)	1		
9	85	79695	BOOT-Insulator	1		
10	11	15874	NUT (10M) (3.500 In. Starter)	1		
10	11	40063 5	NUT (8M) (2.875 In. Starter)	1		
11	15	817272 1	SHIM-Special	1		
12	50	17251A 3	STARTER ASSEMBLY	1	(DRIVELINE) (SEE "STARTER A	
12	50	808011A 1	STARTER ASSEMBLY	1	(DRIVELINE) (SEE "STARTER A	
13	10	47461	SCREW (.437-14 x 1.00)	2		
14	13	32993	LOCKWASHER (.437)	2		
15	13	26993	LOCKWASHER (.312)	1		
16	11	40026 6	NUT (M10)	1		
17		817119 1	ALTERNATOR ASSEMBLY (BLUE)	1	(SEE "ALTERNATOR ASSEMBL	
18	13	26992	LOCKWASHER (.250)	1		
19	11	56374	NUT (.250-20)	1		
20	12	96457	WASHER	1		
21	13	26996	LOCKWASHER (#10)	1		
22	11	79989	NUT (#10-24)	1		
23		85013T	BRACE-Alternator Adjusting	1		
24	12	45176	WASHER	1		
25	10	825427	SCREW (.437-14 x 1.250)	1		
26	12	26168	WASHER	1		
27	10	29198	SCREW & LOCKWASHER (.312-18)	1		
28	23	33186	BUSHING	1		
29	12	20553	WASHER	3		
30	10	48308	SCREW (.375-24 x 3.750)	1		
31		57908 11	SLEEVE-Alternator Lead (10.00 In.	1		
32		848146	BRACKET-Alternator Mount	1		
33	12	45176	WASHER	3		
34	10	825427	SCREW (.437-14 x 1.250)	3		
35	11	23161	NUT (.375-24)	1		
36	54	848130	CLIP-Hose Circulating Pump	1		