



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		99237A10	BRACKET ASSEMBLY-Shift	1	(Serial # 0F745260 Thru 0F87773-	
1		807962A 3	BRACKET ASSEMBLY-Shift	1	(Serial # 0K000012 Thru 0L41562	
2	16	98798 1	STUD-Shift Cable	1		
3	24	98880	SPRING-Shift Cable Stud	1		
4	12	56720	WASHER	2		
5	23	90523	SPACER	1		
6	12	35462	WASHER	4		
7	11	13438	NUT (.250-28)	2		
8	18	32857	PIN-Cotter	1		
9	23	98828	SPACER	1		
10	10	53167	SCREW (.312-18 x .875)	1		
11		12381 1	RETAINER-Shift Cable	1		
12	10	98256	SCREW (.250-28 x .500)	3	(Serial # 0F745260 Thru 0F87773-	
12	10	28635	SCREW (.250-20 x .620)	3	(Serial # 0K000012 Thru 0L41562	
13	13	26992	LOCKWASHER (.250)	3		
14		816283	PLATE-Adapter (Style I)	1	(Serial # 0F745260 Thru 0F87773-	
14		848887	PLATE-Adapter (Style II)	1	(Serial # 0K000012 Thru 0L41562	
15	11	63341	TEE NUT-Shift Cable Stud	1		
16	18	21071	PIN-Cotter	1		
17	17	68402	PIN-Shoulder (Shaft Lever)	1		
18	16	96112	STUD-Shift Cable	1		
19	10	13743	SCREW (.312-18 x 1.843)	1		
20		13898 1	LEVER-Shift	1		
21	13	26992	LOCKWASHER (.250)	3	(Serial # 0K000012 Thru 0L41562	
22	10	73286	SCREW (.250-20 X .620)	3	(Serial # 0K000012 Thru 0L41562	