



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		801331695	FLYWHEEL HOUSING	1,1		
2	16	809908402	STUD	2,2		
3	12	809931067	WASHER	6,6		
4	13	809932095	LOCKWASHER	6,6		
5	11	40021 3	NUT	6,6		
6	25	801331619	O-RING	2,2		
7	10	809913837	SCREW	9,9		
8	13	809932112	LOCKWASHER	9,9		
9		801331697	GUIDE RING	1,1		
10	10	801331698	SCREW TRANSMISSION	1,1		
11	265	801331699	FLYWHEEL	1,1		
12	43	801331701	RING GEAR	1,1		
13	10	811454	BOLT	6,6		
14	30	801331702	BALL BEARING	1,1		
15	52	801761771	COUPLER (1 -STAGE COUPLER)	1,1		
16	10	809913624	SCREW (1 -STAGE COUPLER)	6,6		
17		805045A 4	COUPLER ASSEMBLY (2 -STAGE)	1,1		
18	10	805109 15	SCREW (2 -STAGE COUPLER)	4,4		
19		805110	SNUBBER (2 -STAGE COUPLER)	4,4		
20		805064	ADAPTOR (2 -STAGE COUPLER)	1,1		
21	10	40001192	SCREW (2 -STAGE COUPLER)	6,6		
22	13	40024 8	LOCKWASHER (2 -STAGE COUPLER)	6,6		
23	10	40001134	SCREW (2 -STAGE COUPLER)	6,6		
24	13	40024 7	LOCKWASHER (2 -STAGE COUPLER)	6,6		
25		801333891	HOUSING	1,1		
26	10	809913837	SCREW	8,8		
27	13	809931076	LOCKWASHER	8,8		