



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A32	WATER PUMP ASSEMBLY	1		
2	46	72774A40	BODY, WATER PUMP	1		
3		87631A 1	COVER, WATER PUMP	1		
4	10	73275	SCREW, WATER PUMP (2-7/8")	5		
5	12	20084	WASHER, COVER SCREW	5		
6	27	94915	GASKET, COVER TO OUTER W	1		2
7		94916	WEAR PLATE, OUTER	1		
8	27	94914	GASKET, BODY TO WEAR PLA	2		2
9	19	59504	PLUG, IMPELLER	1		
10	47	59362	IMPELLER	1		
11	28	56662	KEY, IMPELLER DRIVE	1		
12		94576	WEAR PLATE, INNER	1		
13	25	94288	QUAD RING, PUMP HOUSING	1		
14	46	94913A 1	PUMP HOUSING ASSEMBLY	1		
15	26	90562	OIL SEAL, WATER PUMP SH	2		2
16	30	72961	BALL BEARING, WATER PUM	2		
17		59501A 1	SHAFT, WATER PUMP	1		
18	53	23720	SNAP RING, BALL BEARING F	1		
19	26	72785	OIL SEAL, WATER PUMP SH	1		
20		47530	HUB, WATER PUMP PULLEY	1		
21		59762T	PULLEY, WATER PUMP	1		
22	10	47277	SCREW, PULLEY (3/4")	4		
23	13	39107	LOCKWASHER, PULLEY SCREW	4		
24	22	32802	PLUG, PIPE (FOR WATER PUM	1		
25	57	94290	BELT, WATER PUMP	1		
26		47489A 2	BRACKET ASSEMBLY, WATER P	1		
27	10	47462	SCREW, WATER PUMP BRACKE	1		
28	10	48948	SCREW, WATER PUMP BRACKE	1		
29	13	32993	LOCKWASHER, BRACKET SCRE	2		
30	12	27025	WASHER, BRACKET SCREW	1		
31	10	34354	SCREW, WATER PUMP BRACKE	1		
32	13	35048	LOCKWASHER, BRACKET SCRE	1		
33	12	29330	WASHER, WATER PUMP SCREW	1		
34		64177	BRACE, WATER PUMP	1		
35	10	47462	SCREW, BRACE TO ENGINE (1"	1		
36	13	32993	LOCKWASHER, BRACE SCREW	1		
37	12	30315	WASHER, BRACE SCREW	1		
38	10	35786	SCREW, WATER PUMP BRACE (1		
39	13	35048	LOCKWASHER, BRACE SCREW	1		
40	11	24883	NUT, BRACE SCREW	1		