



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		14750A	1 TRANSMISSION ASSEMBLY	1		
2	22	47629	ELBOW, TRANSMISSION TO OIL	2		
3	22	88517	BUSHING, REDUCING - TRANS	1		
4		12128	LEVER, SHIFT - TRANSMISSION	1		
5	16	63335	STUD, SHIFT LEVER	1		
6	12	39143	WASHER, SHIFT LEVER STUD	1		
7	11	20361	NUT, SHIFT LEVER STUD	2		
8	12	29245	WASHER, SHIFT LEVER STUD	2		
9	12	20722	WASHER, TRANSMISSION LEVE	1		
10	13	26993	LOCKWASHER, TRANSMISSION	1		
11	11	22053	NUT, TRANSMISSION LEVER STU	1		
12		47334A	2 BRACKET ASSEMBLY, TRANSMI:	1	(STARBOARD)	
13		35852	1 MOUNT, TRANSMISSION MOUJ	1		
14	10	47462	2 SCREW, MOUNT BRACKET TO T	2		
15	13	32993	2 LOCKWASHER, MOUNT BRACKE	2		
16	10	60179	2 SCREW, TRANSMISSION TO EN	6		
17	13	32993	6 LOCKWASHER, TRANSMISSION	6		
18		48461	1 ADAPTOR, OIL LEVEL GAUGE TL	1	TO TRANSMISSION	
19	25	48462	1 "O" RING, OIL LEVEL TUBE ADA	1		
20		48463	1 TUBE, OIL LEVEL GAUGE	1		
21		48464	1 GAUGE, OIL LEVEL	1		
22	25	35276	1 "O" RING, OIL LEVEL GAUGE	1		
23		48466	1 BRACKET, MOUNTING - OIL LEV	1		
24	10	32417	2 SCREW, MOUNTING BRACKET T	2	MOUNT BRACKET (5/8")	
25	13	26992	2 LOCKWASHER, MOUNTING BRA	2		
26	54	67015	1 CLAMP, OIL LEVEL GAUGE TUBE	1	BRACKET	
27	10	60300	1 SCREW, OIL LEVEL GAUGE TUBI	1		
28	12	29245	2 WASHER, OIL LEVEL GAUGE TU	2		
29	11	20361	1 NUT, OIL LEVEL GAUGE TUBE CI	1		
30		47340A	1 BRACKET ASSEMBLY, TRANSMI:	1	(PORT)	
31		35852	1 MOUNT, TRANSMISSION MOUJ	1		
32	10	47462	2 SCREW, MOUNT BRACKET TO T	2	(1-1/4")	
33	13	32993	2 LOCKWASHER, MOUNT BRACKE	2		
34	32	47516	6 HOSE, TRANSMISSION TO OIL C	2		