



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		14338A 1	WIRING HARNESS	1		
2	84	14337A 1	WIRING HARNESS	1		
3		26079A 2	PLATE, WIRING HARNESS TO M	1		
4	10	34696	SCREW, USE WITH METAL PL	4		
4	10	15001	SCREW, USE WITH PLASTIC P	4		
5		14037	BRACKET, MOUNTING	1		
6	10	37612	SCREW, BRACKET	3		
7	13	35048	LOCKWASHER, BRACKET SCREW	3		
8	23	90523	SPACER, BRACKET SCREW	3		
9	32	77690	WRAPPING, PLASTIC (1/4" DIA)	1		
10		13611	OIL TEMPERATURE SENDER	1		
11	22	36492	BUSHING, REDUCER	1		
12		97257A 1	WATER TEMPERATURE SENDEI	1		
12		49734A 1	WATER TEMPERATURE SENDEI	OPT.		3
13		90806	OIL PRESSURE SENDER	1		
13		37293	OIL PRESSURE SENDER (DUAL)	OPT.		3
14	13	26996	LOCKWASHER, SENDER TERM	3		
15	11	68219	NUT, SENDER TERMINAL (#10)	3		
16	22	64013	REDUCER, OIL PRESSURE SENC	1		
17		17316A 1	IGNITION AMPLIFIER (W/HARNE	1		
18	10	76630	SCREW, IGNITION AMPLIFIER	3		
19	13	26992	LOCKWASHER, IGNITION AMPLII	3		
20	23	92152	SPACER, IGNITION AMPLIFIER S	3		
21	89	96054	STARTER SOLENOID	1		
22	10	98253	SCREW, STARTER SOLENOID	2		
23	13	26992	LOCKWASHER, STARTER SOLEI	2		
24	11	94330	NUT, STARTER SOLENOID TERM	2		
25	11	26419	NUT, STARTER SOLENOID TERM	2		
26	88	11178	CIRCUIT BREAKER (50 AMP)	1		
27	13	26996	LOCKWASHER, CIRCUIT BREAKI	2		
28	11	68219	NUT, CIRCUIT BREAKER TERMIN	2		
29	10	45862	SCREW, CIRCUIT BREAKER (7/8	2		
30	10	71405	SCREW, INSULATOR (7/16")	1		
31	12	56681	WASHER, CIRCUIT BREAKER SC	2		
32	11	46438	NUT, INSULATOR SCREW	2		
33	85	96819T	INSULATOR, CIRCUIT BREAKER	1		