



					Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote	
1		38547	COIL ASSEMBLY, IGNITION	1			
2	54	33271	CLAMP LOCK-COIL TERMINAL	2			
3	13	26996	LOCKWASHER, COIL TERMINA	2			
4	11	33277	NUT, COIL TERMINAL	2			
5		38791	JUMPER WIRE, COIL TO DISTRIE	1			
6		38542	LEAD ASSEMBLY, COIL TO DIST	1			
7		37074	BRACKET, COIL MOUNTING	1			
8	10	38524	SCREW, COIL MOUNTING BRAC	1			
9	12	26825	WASHER, COIL MOUNTING BRAI	1			
10	10	38560	SCREW, COIL MOUNTING BRAC	1			
11	12	20346	WASHER, COIL MOUNTING BRAI	1			
12	23	20326	SPACER, COIL MOUNTING BRAC	1			
13	13	26995	LOCKWASHER, DISTRIBUTOR T	1			
14	11	38824	NUT, JUMPER WIRE TO DISTRIE	1			
15		37036	CLAMP, DISTRIBUTOR TO CYLIN	1			
16	16	37176	STUD, DISTRIBUTOR CLAMP TO	1			
17	12	37175	WASHER, DISTRIBUTOR CLAMP	1			
18	11	37177	NUT, DISTRIBUTOR CLAMP STU	1			
19		38541	LEAD ASSEMBLY, HIGH TENSIO	4			
20		20119	PROTECTOR, HIGH TENSION L	4			
21	33	37083	SPARK PLUG (AC-44F)	4			
22	27	37058	GASKET, DISTRIBUTOR	1			
23		37178	DISTRIBUTOR ASSEMBLY, COMF	1			
24		37184	CAP ASSEMBLY, DUSTRIBUTO	1			
25		37179	BALL AND SPRING ASSEMBL	1			
26		37180	ROTOR, DISTRIBUTOR	1			
27	12	37181	WASHER, FELT-DISTRIBUTOR	1			
28		37182	SHIELD, BREAKER ASSEMBLY	1			
29		37193	BREAKER ASSEMBLY, DISTRIE	1			
30	10	37187	SCREW, BREAKER ASSEMBLY	1			
31	12	37186	WASHER BREAKER ASSEMBLY	1			
32	12	37185	WASHER, BREAKER ASSEMBL	1			
33	24	37195	SPRING, BREAKER CAM ADVAI	1			
34		37189	CONDENSER	1			
35	10	37190	SCREW, CONDENSER TO DIST	1			
36	13	37193	LOCKWASHER, CONDENSER E	1			
37	17	37196	PIN, MAIN SHAFT	1			
38	10	37188	SCREW, PRIMARY TERMINAL	1			
39		37194	RETAINER, DISTRIBUTOR CAF	1			
39		37197	RETAINER, DISTRIBUTOR CAF	1	NOT AS SHOWN		
40	10	37192	SCREW, CLIP RETAINER TO DI	2			