



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		38164	HOUSING, FLYWHEEL	1		
2		38185	MOUNT, RUBBER - FLYWHEEL F	2		
3	10	21722	SCREW, RUBBER MOUNT TO FL	8		
4	13	26992	LOCKWASHER, RUBBER MOUNT	8		
5		38166	COVER, FLYWHEEL HOUSING	1		
6	27	38309	GASKET, FLYWHEEL COVER	1		
7	10	20776	SCREW, FLYWHEEL COVER TO I	5		
8	13	26992	LOCKWASHER, FLYWHEEL COV	5		
9	16	38242	STUD, FLYWHEEL HOUSING TO	4		
10	23	38244	BUSHING, FLYWHEEL HOUSING	2		
11	12	20086	WASHER, FLYWHEEL HOUSING	4		
12	11	23161	NUT, FLYWHEEL HOUSING STUI	4		
13		38170A 1	HOUSING ASSEMBLY, FRONT MI	1		
14		35086	BUTTON, CHECK VALVE - FROD	1		
15	24	32726	SPRING, TENSION - RELIEF VA	1		
16	27	32019	GASKET, RELIEF VALCE CAP	1	(Part of 27-37073A1)	
17		32729A 1	CAP ASSEMBLY, RELIEF VALVE	1		
18	16	38236	STUD, FRONT MOUNT HOUSING	3		
19	16	38237	STUD, FRONT AND REAR MOUN	1		
20	16	38238	STUD, FRONT AND REAR MOUN	2		
21	12	22937	WASHER, FRONT AND REAR MC	6		
22	11	38582	NUT, FRONT AND REAR MOUNT	6		
23		38172	CARRIER, RUBBER MOUNT	1		
24	23	38307	SLEEVE, RUBBER - MOUNT CAR	1		
25	23	38308	SLEEVE, RUBBER - MOUNT CAR	1		
26		38185	MOUNT, RUBBER - REAR MOUN	2		
27		38171	HOUSING, REAR MOUNT	1		
28	10	22960	SCREW, RUBBER MOUNT TO M	4		
29	10	20776	SCREW, RUBBER MOUNT TO RE	4		
30	12	28426	WASHER, RUBBER MOUNT SCR	4		
31	10	33008	SCREW, REAR MOUNT HOUSING	3		
32	11	35814	NUT, REAR MOUNT HOUSING SI	3		
-	27	37095A 1	GASKET SET(CYLINDER HEAD)	1		
-	27	37097A 1	GASKET SET(MANIFOLD)	1		
-	27	37073A 1	GASKET SET(MISCELLANEOUS)	1		