



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		38578	WIRING HARNESS, EXTERNAL	1	
2		30050	TERMINAL, WIRING HARNESS	AR	
3	54	38537	CLIP, WIRING, HARNESS TO CYL	1	
4	10	38524	SCREW, WIRING HARNESS CLIP	1	
5	13	26993	LOCKWASHER, WIRING HARNE	1	
6		26079	PLATE, WIRING HARNESS TO M	1	
7		38532	BRACKET, MOUNTING- WIRING I	1	
8	10	21548	SCREW, MOUNTING BRACKET	4	
9	13	26992	LOCKWASHER, MOUNTING BRA	2	
10	10	38603	SCREW, WIRING HARNESS PLA	4	
11	13	26995	LOCKWASHER, WIRING HARNE	4	
12		38559	OIL PRESSURE SENDER ASSEM	1	
13	12	20878	WASHER, OIL PRESSURE SEN	1	
14	11	20645	NUT, OIL PRESSURE SENDER	1	
15		38557	ADAPTOR, OIL PRESSURE SENC	1	
16	27	38558	GASKET, OIL PRESSURE SENC	1	(Part of 27-37073A1)
17		38534	WATER TEMPERATURE SENDE	1	
18	10	20681	SCREW, WATER TEMPERATUI	1	
19	50	37151	STARTER MOTOR ASSEMBLY	1	SEE A6 FOR BREAKDOWN
20	10	22040	SCREW, STARTER MOTOR TO F	3	
21	12	20722	WASHER, STARTER MOTOR SCI	3	
22	11	29250	NUT, STARTER MOTOR SCREW	3	
23		38540	BATTERY CABLE, POSITIVE (REC	1	
24		38539	BATTERY CABLE, NEGATIVE (BL	1	
25		38516	BRACKET, MOUNTING-STARTEF	1	
26	10	25299	SCREW, MOUNTING BRACKET T	2	
27	13	26993	LOCKWASHER, MOUNTING BRA	2	
28		32177A	RECTIFIER ASSEMBLY	1	
29	13	26996	LOCKWASHER, RECTIFIER TERM	2	
30	11	20645	NUT, RECTIFIER TERMINAL	2	
31	10	29852	SCREW, HARNESS LEAD TO REI	1	
32	10	26065	SCREW, RECTIFIER TO MOUNTI	1	
33	11	29250	NUT, RECTIFIER SCREW	1	
34		25661	STARTER SOLEOID	1	
35	10	21625	SCREW, STARTER SOLENOID TI	2	
36	11	20361	NUT, STARTER SOLENOID SCRE	2	
37	13	20202	LOCKWASHER, STARTER SOLEI	2	
38	11	20083	NUT, STARTER SOLENOID TERM	2	
39	13	26996	LOCKWASHER, STARTER SOLEI	2	
40	11	20645	NUT, STARTER SOLENOID TERM	2	
41		27073A	GASKET SET Miscellaneous	1	