



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		14746A	1 TRANSMISSION ASSEMBLY	1		
1		14746A	4 TRANSMISSION ASSEMBLY	1		
2	22	47629	ELBOW-Transmission To Oil Hose	2		
3	22	88517	FITTING-Reducing-Transmission	1		
4		47339A	4 COUPLING ASSEMBLY-Engine	1		
5	19	47463	PLUG-Expansion-Engine Coupli	1		
6	53	47469	RING-Snap-Ball Bearing To Eng	1		
7	23	47471	BEARING-Engine Coupling	1		
8	24	47755	SPRING-Guide-Engine Coupling	1		
9	30	47470	BEARING-Ball	1		
10		47333A	1 HOUSING ASSEMBLY-Bearing S	1		
11	25	47756	O RING-Bearing Support Housi	1		
12	26	47465	SEAL-Oil-Bearing Support Hous	1		
13	31	47468	BEARING-Needle-Bearing Supp	1		
14	27	47903	GASKET-Bearing Support Housin	1		
15	10	47462	SCREW (.437-14 x 1.250)	8		
16	13	32993	LOCKWASHER (.437)	8		
17		48461	ADAPTOR-Oil Level Gauge Tube	1		
18	25	48462	O RING-Oil Level Tube Adaptor	1		
19		48463	TUBE-Oil Level Gauge	1		
20		48464	GAUGE-Oil Level	1		
21	25	35276	O RING-Oil Level Gauge	1		
22		48466	BRACKET-Mounting-Oil Level Ga	1		
23	10	32417	SCREW (.250-28 x .625)	2		
24	13	26992	LOCKWASHER (.250)	2		
25		47340A	1 BRACKET ASSEMBLY-Transmis	1		
26		35852	MOUNT-Transmission Mount Br	1		
27	10	47462	SCREW (.437-14 x 1.250)	2		
28	13	32993	LOCKWASHER (.437)	2		
29	10	47467	SCREW (.625-18 x 5.500)	2		
30	12	47466	WASHER (NEOPRENE)-Tailstoc	4		
31	12	47475	WASHER-Tailstock Screws	2		
32	13	34846	LOCKWASHER-Tailstock Screws	2		
33	12	33171	WASHER-Tailstock Screws	2		
34	11	22339	NUT (.625-18)	2		
35	87	88031	SWITCH-Temperature	1		
36	32	47516	6 HOSE (30.00 In.)-Transmission To (2		
37	10	60179	SCREW (.437-14 x 3.500)	6		
38	13	32993	LOCKWASHER (.437)	6		
39		12128	1 LEVER-Shift Transmission	1	COMPONENT OF TRANSMISSI	
40	16	62225	1 STUD-Shift Lever	1	COMPONENT OF TRANSMISSI	