



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66167A	2 BRACKET, TRANSMISSION (REA	2		
1		52158A20	BRACKET, TRANSMISSION (REA	2		
2	10	37269	SCREW, BRACKET TO TRANSMI	4		
2	10	47462	SCREW, BRACKET TO TRANSM.	4		
3	13	32993	LOCKWASHER, BRACKET SCREW	4		
4	10	57357	SCREW, CLAMPING - MOUNTING	2		
4	10	47724	SCREW, CLAMPING - MTG. BRAC	2		
5	13	32993	LOCKWASHER, CLAMPING SCRE	2		
6	54	47528	CLAMP, ADJUSTING TRUNNION	4		
7	11	29553	NUT, CLAMPING SCREW	2		
8		66418T	BRACKET, MOUNTING - ENGINE	2		
9	10	68101	SCREW, MOUNTING BRACKET (6		
10	13	35048	LOCKWASHER, MOUNTING BRA	6		
11	10	37269	SCREW, CLAMPING - MOUNTING	2		
12	13	32993	LOCKWASHER, CLAMPING SCRE	2		
13	11	29553	NUT, CLAMPING SCREW	2		
14		66166A	4 TRUNNION, ADJUSTING - MOUN	4		
15	13	68102	LOCKWASHER, MOUNTING BRA	4		
16		66284A	2 BASE, ENGINE MOUNT	4		
17	11	20739	NUT, JAM - ENGINE MOUNT BA	8		
18	14	66658	TAB WASHER, BASE NUT	4		