



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		806235A	1 HOUSING ASSEMBLY-THERMOS	1		
2	22	32803	PLUG-PIPE (3/8 IN.)	2		
3	27	806871	GASKET-THERMOSTAT	1		3,4
4	27	53045	1 GASKET-THERMOSTAT HOUSIN	1		
5		807252	2 THERMOSTAT	1		
6	23	806922	SLEEVE	1		
7	10	98794	SCREW (3/8-16 X 1 IN.)	2		
8	32	807407	HOSE-THERMOSTAT HOUSING.	1		
9	32	807989	HOSE-COOLER TO COOLER	1	(USE WITH 10 IN. ENGINE OIL C	
9	32	807406	1 HOSE-COOLER TO COOLER	1	(USE WITH 13 IN. ENGINE OIL C	
10	32	808045	HOSE-FUEL COOLER TO TRANSI	1		
11	32	808044	HOSE-TRANSMISSION OIL COOL	1		
12	32	17435	79 HOSE-SEA WATER PUMP TO TR	1		
13	54	815504222	CLAMP	10		
14	32	89718	1 HOSE-THERMOSTAT HOUSING	1		
15	54	815504232	CLAMP	2		
16	32	89749	1 HOSE-THERMOSTAT HOUSING	1		
17	32	807201	HOSE-THERMOSTAT HOUSING	1	STARBOARD EXHAUST MANIFC	
18	54	815504220	CLAMP	4		
19		805546A	2 BRACKET-TRANSMISSION OIL CI	1		
20		77223	3 PAD	1		
21	54	815504232	CLAMP	1		
22	10	37612	SCREW (3/8-16 X 1-1/4 IN.)	1		
23	13	35048	LOCKWASHER (3/8 IN.)	1		
24		807996T	COOLER-TRANSMISSION OIL CO	1		
25	54	47715	CLIP	1		
26	10	35765A	1 SCREW & LOCKWASHER (5/16-1	1		
.	27	805396A95	GASKET SET-OVERHAUL	1	(7.4L)	
.	27	805396A92	GASKET SET-OVERHAUL	1	(8.2L)	