



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	808011A 1	STARTER MOTOR ASSEMBLY	1	(SEE "STARTER MOTOR" FOR E	
2	10	47462	SCREW (7/16-14 X 1-1/4 IN.)	2		
3	13	32993	LOCKWASHER (7/16 IN.)	2		
4	11	15874	NUT (M10 X 1.5)	1		
5	11	40021 1	NUT (M5 X 0.8)	1		
6	13	32993	LOCKWASHER (7/16 IN.)	1		
7	13	26996	LOCKWASHER (#10)	1		
8	85	79695	BOOT-INSULATOR	1		
9	88	79023A91	FUSE ASSEMBLY (90 AMP)	1		
10	11	21825	NUT (1/4-28)	1		
11		861047	BRACKET-ALTERNATOR	1		
12	10	56743	SCREW (3/8-24 X 3-1/8 IN.)	1		
13	11	23161	NUT (3/8-24)	1		
14	10	29198	SCREW & LOCKWASHER (5/16-1	1		
15	10	17965	SCREW (7/16-14 X 11/16 IN.)	2		
16	16	806591	STUD-ALTERNATOR & SEAWAT	1		
17		807081T	BRACKET-LIFTING EYE	1		
18	16	861174	STUD (7/16-14 X 2 1/2 IN.)	2		
19	11	29553	NUT (7/16-14)	2		
20		807653T	ALTERNATOR ASSEMBLY	1	(SEE "ALTERNATOR (MANDO)"	
21	12	96457	WASHER-PHENOLIC	1		
22	13	26996	LOCKWASHER (#10)	1		
23	11	79989	NUT (#10-24)	1		
24	13	26992	LOCKWASHER (1/4 IN.)	1		
25	11	94330	NUT (1/4-20)	1		
26		861045	BRACKET-IDLER	1		
27	10	92913	SCREW (7/16-14 X 3/4 IN.)	2		
28	11	29553	NUT (7/16-14)	1		
29	43	818381 2	PINION STUD	1		
30		818380T	BUSHING	1		
31		807757T	PULLEY-IDLER	1		
32	11	859135	NUT (7/16-20)	1		