



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	35	802885Q	FILTER-OIL	1		
2		814420A	5 BRACKET ASSEMBLY	1	(USE W/OUT RISERS AND W/3	
2		817403A	4 BRACKET ASSEMBLY	1	(USE W/6 IN. RISERS)	
3	22	38407	1 PLUG-PIPE (1/2-14)	2		
4	22	814822	FITTING	1		
5	22	805563	FITTING-ADAPTOR	2		
6	32	807408	HOSE - BRACKET TO OIL COOLE	1	(IN-LINE TRANSMISSION)	
6	32	807411	HOSE - BRACKET TO OIL COOLE	1	(V-DRIVE TRANSMISSION)	
7	35	818400A	1 ADAPTOR	1		
8	26	42077	SEAL	1		4
9	22	806121	FITTING	1		
10	27	91892	GASKET	1		4
11	22	805632	FITTING	1		
12		807371T	1 COOLER-OIL (10 IN.)	1		
13	32	808017	HOSE - COOLER TO ADAPTOR	1		
14		808043A	1 BRACKET	1		
15	12	35462	WASHER	1		
16	11	826708	8 NUT	1		
17		807445T	1 CLAMP	1		
18	12	34567	WASHER	2		
19	11	29553	NUT (7/16-14)	2		
20	32	806262	1 HOSE - BRACKET TO ADAPTOR	1	(IN-LINE TRANSMISSION)	
20	32	806178	4 HOSE - BRACKET TO ADAPTOR	1	(V-DRIVE TRANSMISSION)	
-	27	802567A98	GASKET SET-ENGINE OVERHAU	1		