



- 1 - Fuel Pump
- 2 - Throttle Body
- 3 - Distributor
- 4 - Coll
- 5 - Electronic Spark Control (KS) Module
- 6 - Data Link Connector (DLC)
- 7 - Manifold Absolute Pressure (MAP) Sensor
- 8 - Knock Sensor (Port and Starboard)
- 9 - Idle Air Control (IAC)
- 10- Throttle Position (TP) Sensor
- 11- Engine Coolant Temperature (ECT) Sensor
- 12- Electronic Control Module (ECM)
- 13- Fuel Pump Relay
- 14- Ignition/System Relay
- 15- Fuse (15 Amp) Fuel Pump
 Fuse (15 Amp) ECM/DLC/Battery
 Fuse (10 Amp) ECM/Injector/Ignition/Knock Module
- 16- Harness Connector To Starting/Charging Harness
- 17- Positive (+) Power Wire To Engine Circuit Breaker
- 18- Intake Air Temperature (IAT) Sensor
- 19- Gear Lube Bottle - Audio Warning Switch
- 20- Oil Pressure - Audio Warning Switch
- 21- Water Temperature Sender (Gauge)

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	861092A 1	WIRING HARNESS-ENGINE EFI	1	(S/N 0L086000 AND BELOW)	
-	84	861158T 2	WIRING HARNESS-ENGINE	1	(S/N 0L086001 AND UP) MEFI-3	