



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		806235A	1 HOUSING ASSEMBLY-Thermostat	1	
2	22	32803	PLUG-Pipe (3/8 in.)	2	
3	27	806871	GASKET-Thermostat	1	22
4	27	53045 1	GASKET-Thermostat Housing	1	22
5		807252	2 THERMOSTAT	1	
6	23	806922	SLEEVE	1	
7	10	98794	SCREW (3/8-16 x 1 in.)	2	
8	32	807407	HOSE-Thermostat Housing, to Engi	1	
9	32	807989	HOSE-Engine Oil Cooler to Fuel Co	1	
10	32	808045	HOSE-Fuel Cooler to Power Steerin	1	
11	32	808044	HOSE-Power Steering Oil Cooler to	1	
12	32	17435 79	HOSE-Sea Water Pump to Transon	1	
13	54	815504222	CLAMP	10	
14	32	89718	1 HOSE-Thermostat Housing to Wate	1	
15	54	815504232	CLAMP	2	
16	32	89749	1 HOSE-Thermostat Housing to Port I	1	
17	32	807201	HOSE-Thermostat Housing to Start	1	
18	54	815504220	CLAMP	4	
19		805546A	2 BRACKET-Transmission Oil Cooler	1	
20		77223	3 PAD	1	
21	54	815504224	CLAMP	1	
22	10	86750	SCREW (5/16-18 x 5/8 in.)	1	
23	12	20572	WASHER	1	
24		807292T	COOLER-Power Steering Oil Cooler	1	
25	54	47715	CLIP	1	
26	10	35765A	1 SCREW & LOCKWASHER (5/16-1	1	
.	27	805396A95	GASKET SET-Overhaul	1	