



4819

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
NS		865519A01	LONGBLOCK, Base	1	(Block codes 4WV and 4WY)	
NS		865752A01	LONGBLOCK, Base	1	(Block codes 4ZW and 4ZY)	
NS		865521A01	LONGBLOCK, H.O.	1	(Block codes 4WA and 4WF)	
NS		865754A01	LONGBLOCK, H.O.	1	(Block codes 4ZA and 4ZF)	
1		NSS	NOT SOLD SEPARATE, BLOCK-E	1	(Order Longblock Assembly)	
2		NSS	NOT SOLD SEPARATE, CAP-Cr	5		4,5,22,23
3	429	881654	CRANKSHAFT	1	(Base)	5,22
3	429	881654	CRANKSHAFT	1	(H.O.)	4,23
4	23	881606	BEARING KIT, Crankshaft	4		4,5,22,23
5	23	881607	BEARING KIT, Crankshaft Main Th	1		4,5,22,23
6	17	881605	PIN, Balancer Locating	1		4,5,22,23
7	43	881655	SPROCKET, Crankshaft	1		4,5,22,23
8		892616	COVER, Front	1		4,5,22,23
9	27	881604	GASKET, Front Cover	1		2,4,5,22,23
10	26	881613	SEAL, Crankshaft Front Oil	1		2,4,5,22,23
11	10	881577	SCREW, (M6 x 30)	6		4,5,22,23
12		892615	SENSOR, Camshaft Position	1		4,5,22,23
13		NSS	NOT SOLD SEPARATE, SEAL-C	1		4,5,22,23
14	10	881594	SCREW, (M6 x 20)	1		4,5,22,23
15		891769	BALANCER, Crankshaft	1		
16	10	881587	SCREW, (M16 x 1.5)	1		4,5,22,23
17	12	881614	WASHER	1		4,5,22,23
18	26	881608	SEAL, Crankshaft Rear Oil	1		3,4,5,22,23
19	17	881609	PIN, Flywheel Locating	2		4,5,22,23
20	222	881640	FLYWHEEL	1	(Base and H.O.)	4,5,22,23
21	10	881578	BOLT	6		4,5,22,23
22	17	35312	PIN, Dowel, Oil Pump Locating	1		4,5,22,23
23	16	881615	STUD, Crankshaft Bearing Cap	10		4,5,22,23
24	10	881580	SCREW, (M12 x 89)	10		4,5,22,23
25		883236	DEFLECTOR, Oil	1		4,5,22,23
26	11	881579	NUT	9		4,5,22,23
27		881652	PUMP, With Screen, Oil	1		4,5,22,23
28	17	881611	PIN, Oil Pump	1		4,5,22,23
29	24	881610	SPRING, Oil Pump	1		4,5,22,23
30	22	881643	VALVE, Pressure Relief	1		4,5,22,23
31		14761	SHAFT AND RETAINER, Oil Pump	1		4,5,22,23
32	23	36183	RETAINER, Oil Pump Drive	1		4,5,22,23
33	10	881585	SCREW, (M10 x 60)	1		4,5,22,23
34		862349	PULLEY, Crankshaft	1		4,5,22,23
35	10	40090 25	SCREW, (M10 x 25)	3		4,5,22,23