



18357

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	46	862914T08	SEAPUMP ASSEMBLY	1		
1	46	862914A13	HOUSING ASSEMBLY, Impeller	1		
2	47	862232A 2	IMPELLER	1		
3	25	841807	O-RING, (3.500 x .103) (Also i	1		
4	26	862037	SEAL, Oil	1		
5		862235A 1	DRIVESHAFT ASSEMBLY, Imp	1		
6		862039	TOLERANCE RING	1		
7	26	862040	SEAL, Lip	1		
8		862776A02	COVER KIT, Impeller Housing	1		
9	22	806608A 1	PLUG KIT, Blue, Drain	2		
10	25	32509	O-RING, (.489 x .070)	2		2.3
11	10	40003 28	SCREW, (M6 x 16)	4		
12		881879A 6	SENSOR, (0 - 100 PSI), Water Pres:	1		
13	10	40003 33	SCREW, (M6 x 40)	2		
14		863859T	BRACKET, Sea Water Pump	1		
15	10	40003 31	SCREW, (M6 x 30)	1		
16		862351T	PULLEY	1		
17		863861T	BRACKET, Idler Pulley	1		
18		865444T	PULLEY, (3.50 Inch Diameter), Idle	1	(Grooved)	
19		818382	PULLEY, Idler	1	(Non-Grooved)	
20	10	40108 16	SCREW, (M10 x 16 Hex Flange)	2		
21	10	40108 45	SCREW, (M10 x 45)	1		
22	16	854309	STUD, (M10 x 76)	2		
23	11	826292	NUT, (M10)	2		