



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A50	WATER PUMP ASSEMBLY	1		
2	46	72774A40	BODY	1		
3		87631A 1	COVER	1		
4	10	73275	SCREW (3")	2		
4	10	99347	SCREW (3-3/4")	3		
5	12	20084	WASHER	5		
6	27	94915	GASKET	1		
7		94916	WEAR PLATE (OUTER)	1		
8	27	94914	GASKET	2		
9	19	59504	PLUG	1		
10	47	59362 1	IMPELLER (USE W/D KEY)	1		
11	28	56662	KEY	1		
12		94576	WEAR PLATE (INNER)	1		
13	25	94288	QUAD RING	1		
14	46	94913A 2	PUMP HOUSING ASSEMBLY	1		
15	26	90562	OIL SEAL	2		
16	30	72961	BALL BEARING	2		
17		59501A 1	SHAFT	1		
18	53	23720	SNAP RING	1		
19	26	72785	OIL SEAL	1		
20		47530	HUB	1		
21		52822T	PULLEY (CAST)	1		
22	10	47277	SCREW (3/4")	4		
23	13	39107	LOCKWASHER	4		
24	22	32802	PIPE PLUG (FOR WATER PUMP)	1		
25	57	13457T	BELT (30")	1		
26		15295T	BRACKET (STAMPED)	1		
27	10	47461	SCREW (1")	1		
28	10	17965	SCREW	1		
29	13	32993	LOCKWASHER	2		
30	12	27025	WASHER	1		
32	13	39107	LOCKWASHER	3		
33	11	21908	NUT	3		
34		15751T	BRACE	1		
35	10	47461	SCREW (1")	1		
36	13	32993	LOCKWASHER	1		
37	12	30315	WASHER	1		
38	10	35786	SCREW (1")	1		
39	13	35048	LOCKWASHER	1		
40	11	46335	NUT	1		