



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	94111A 8	WIRING HARNESS	1		
2		26079A 2	PLATE	1		
3	10	15001	SCREW	4		
4		98493A 2	BRACKET	1		
7		817509T	IGNITION AMPLIFIER	1		
8	84	15275A 1	HARNESS	1		
9	11	64015	NUT	6		
10	23	92152	SPACER	6		
11		97257A 1	WATER TEMPERATURE SENDER	1		
11		49734A 1	WATER TEMPERATURE SENDER	1		
12	13	26996	LOCKWASHER	1		
13	11	68219	NUT	1		
14		90806	OIL PRESSURE SENDER	1		
14		37293	OIL PRESSURE SENDER (DUAL)	1		
15	13	26996	LOCKWASHER	1		
16	11	68219	NUT	1		
17	22	64013	REDUCER	1		
18		97163	MOUNTING BRACKET	1		
19	88	11178	CIRCUIT BREAKER (50 AMP)	1		
20	13	26996	LOCKWASHER	2		
21	11	68219	NUT	2		
22	10	45862	SCREW (7/8")	2		
23	10	71405	SCREW (7/16")	1		
24	12	56681	WASHER	2		
25	11	61356	NUT	3		
26	85	96819T	INSULATOR	1		
27	89	96054	STARTER SOLENOID	1		
28	10	47910	SCREW (5/8")	1		
29	11	20361	NUT	2		
30	13	26992	LOCKWASHER	2		
31	11	26419	NUT (8-32)	2		
32	11	94330	NUT (1/4-20)	2		
33		96940T	BRACKET	1		
34	10	37612	SCREW (1-1/4") - 3/8-16 THREAD	1		
35	13	35048	LOCKWASHER - 3/8-16 THREAD	1		
34	10	47462	SCREW (1-1/4") - 7/16-14 THREA	1		
35	13	32993	LOCKWASHER - 7/16-14 THREA	1		