



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1376	5659A	CARBURETOR ASSEMBLY, COMF	1	
1		N.S.S.	AIR HORN (NOT SOLD SEPARA	1	
2	1397	5836	POWER PISTON ASSEMBLY	1	
3			GASKET, AIR HORN	1	11
4	10	33043	SCREW, AIR HORN TO FLOW E	7	
5	10	33048	SCREW, AIR HORN TO FLOW E	1	
6	13	26996	LOCKWASHER, AIR HORN SCF	8	
7	1397	3330	NUT, FUEL INLET-AIR HORN	1	
7	35	53336	FILTER, FUEL INLET-AIR HORN	1	
9	24	48143	SPRING, FUEL INLET-AIR HOR	1	
10			GASKET, FUEL INLET NUT (LAF	1	11
11			GASKET, FUEL INLET FILTER (1	11
12	1397	5837	FLOAT ASSEMBLY	1	
13	17	33037	PIN, HINGE-FLOAT TO AIR HOF	1	
14			CLIP, HINGE PIN	1	11
15			INLET NEEDLE AND SEAT ASS	1	11
16			GASKET, INLET NEEDLE AND S	1	11
17	1397	5841	FLOAT BOWL ASSEMBLY	1	
18		N.S.S.	VENTURI CLUSTER ASSEMBLY	1	
19			GASKET, VENTURI CLUSTER	1	11
20	1397	5843	SCREW, VENTRI CLUSTER TO	1	
21			GASKET, VENTURI CLUSTER E	1	11
22	1397	5842	SCREW, VENTURI CLUSTER T	2	
23			GUIDE, PUMP DISCHARGE-FLC	1	10
24			SPRING, PUMP DISCHARGE-FLO	1	11
25			BALL, PUMP DISCHARGE-FLOA	1	11
26			POWER VALVE ASSEMBLY, FLI	1	11
27			GASKET, POWER VALVE	1	11
28	1397	2450	JET, FLOAT BOWL (STANDARC	2	
29	1397	5833	LEVER, PUMP-AIR HORN	1	
30	10	33047	SCREW, AIR HORN PUMP LEVI	1	
31	1397	5834	PUMP SHAFT AND LEVER ASS	1	
32	1397	5845	ROD, PUMP	1	
33			CLIP, RETAINER-PUMP ROD	1	11
34			PUMP ASSEMBLY, FLOAT BOW	1	11
35			CLIP, RETAINER-FLOAT BOWL	1	11
36			SPRING, PUMP RETURN -FLOA	1	11
37			GASKET, THROTTLE BODY	1	11
38		N.S.S.	THROTTLE BODY ASSEMBLY (1	
39			IDLE ADJUSTING NEEDLE, THF	2	11
40	24	22050	SPRING, IDLE ADJUSTING NEE	2	