



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		63499	BRACKET, MOUNTING - ENGINE	2		
2	10	68743	SCREW, ENGINE LOCATING	2		
3	11	22024	NUT, ENGINE LOCATING SCREW	2		
4	16	65737	STUD, MOUNTING BRACKET TO	3		
4	16	65743	STUD, MOUNTING BRACKET TO	1		
5	12	54426	WASHER, MOUNTING BRACKET	4		
6	11	34933	NUT, MOUNTING BRACKET STU	4		
7		66284	BRACKET, MOUNTING	2		
8	11	20739	NUT, JAM - MOUNTING BRACK	4		
9	13	68102	LOCKWASHER, MOUNTING BRA	2		