



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	99417A 2	STARTER MOTOR ASSEMBLY	1	USE WITH 12-3/4" FLYWHEEL	
2	10	94435	SCREW, STARTER MOTOR (4-21)	1	USE WITH 12-3/4" FLYWHEEL	
2	10	34544	SCREW, STARTER MOTOR (1-15)	1	USE WITH 12-3/4" FLYWHEEL	
3		35363	BRACE, STARTER MOTOR	1	USE WITH 12-3/4" FLYWHEEL	
4	12	29245	WASHER, STARTER MOTOR STI	1	USE WITH 12-3/4" FLYWHEEL	
5	11	72008	NUT, STARTER MOTOR STUD	1	USE WITH 12-3/4" FLYWHEEL	
6	10	35765	SCREW, BRACE TO ENGINE (5/8	1	USE WITH 12-3/4" FLYWHEEL	
7	13	26995	LOCKWASHER, STARTER TERM	2		
8	11	26419	NUT, STARTER TERMINAL (#8)	2		
9	50	12177A 2	STARTER MOTOR ASSEMBLY	1	USE WITH 14" FLYWHEEL	
2	10	94435	SCREW, STARTER MOTOR (4-21)	2	USE WITH 14" FLYWHEEL	
3		12404	BRACE, STARTER MOTOR	1	USE WITH 14" FLYWHEEL	
4	12	29245	WASHER, STARTER MOTOR STI	2	USE WITH 14" FLYWHEEL	
5	11	72008	NUT, STARTER MOTOR STUD	2	USE WITH 14" FLYWHEEL	
6	10	35765	SCREW, BRACE TO ENGINE (5/8	1	USE WITH 14" FLYWHEEL	
7	13	26995	LOCKWASHER, STARTER TERM	2		
8	11	26419	NUT, STARTER TERMINAL (#8)	2		
9		92497A 3	ALTERNATOR (55 AMP)	1		
10	13	26996	LOCKWASHER, ALTERNATOR TI	1		
11	12	96457	WASHER, ALTERNATOR TERMINI	1		
12	11	30968	NUT, ALTERNATOR TERMINAL (	1		
13	13	21272	LOCKWASHER, ALTERNATOR TI	1		
14	11	20890	NUT, ALTERNATOR TERMINAL (	1		
15		85013	BRACE, ALTERNATOR ADJUSTIP	1		
16	10	27165	SCREW, ALTERNATOR BRACE	1		
17	13	35048	LOCKWASHER, ALTERNATOR BI	1		
18	12	20553	WASHER, ALTERNATOR BRACE	1		
19	10	74824	SCREW, ALTERNATOR BRACE	1		
20	12	26168	WASHER, ALTERNATOR BRACE	1		
21	23	52095	SPACER, ALTERNATOR BRACE	1		
22		57908 11	TUBING, ALTERNATOR LEADS	2		
23		87115A 1	BRACKET, ALTERNATOR	1	W/POWER STEERING	
24	10	37612	SCREW, ALTERNATOR BRACKE	2	W/POWER STEERING	
24	10	34354	SCREW, ALTERNATOR BRACKE	1	W/POWER STEERING	
25	13	35048	LOCKWASHER, ALTERNADTR BI	3	W/POWER STEERING	
26		93175T	BRACKET, ALTERNATOR	1	W/O POWER STEERING	
27	10	37612	SCREW, ALTERNATOR BRACKE	3	W/O POWER STEERING	
28	13	35048	LOCKWASHER, ALTERNATOR BI	3	W/O POWER STEERING	
29	10	48308	SCREW, ALTERNATOR (3-3/4")	1		
30	12	20553	WASHER, ALTERNATOR BRACK	2		
31	23	33186	BUSHING, ALTERNATOR BRACK	1		
32	11	23161	NUT, ALTERNATOR BRACKET SI	1		
32	95	78895	INSULATOR FOOT, STARTER T	1		