



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		74436A 9	HYDRAULIC PUMP ASSEMBLY	1		
2	25	21720	"O" RING, HYDRAULIC PUMP T	4		
3		48077A 3	CONTROL VALVE ASSEMBLY	1		
4	25	21720	"O" RING, HYDRAULIC PUMP T	4		
5	22	38609	PLUG, CONTROL VALVE	1		
6	10	21091	SCREW, CONTROL VALVE TO H	4		
7	13	26992	LOCKWASHER, CONTROL VALVE	4		
8		58397A 3	BRACKET ASSEMBLY, MOUNTIN	1		
9		58491	BUMPER, RUBBER - PUMP MO	2		
10	10	59784	SCREW, PUMP MOUNTING BRA	6		
11	12	29245	WASHER, PUMP MOUNTING BR	6		
12	10	45377	BRACKET, MOUNTING - HYDRAL	2		
13	10	24234	SCREW, HYDRAULIC PUMP TO F	4		
14	13	39107	LOCKWASHER, HYDRAULIC PUN	4		
15	11	21908	NUT, HYDRAULIC PUMP SCREW	4		
16	10	68298	SCREW, PUMP MOUNTING BRA	2		
17	11	35304	NUT, PUMP MOUNTING BRACK	2		
18	84	74023	CONNECTOR AND HARNESS (GF	1		
19		45559	TERMINAL BLOCK, HYDRAULIC	1		
20	10	48409	SCREW, TERMINAL BLOCK TO H	2		
21	10	62568	SCREW, HARNESS LEADS TO TE	2		
22		57756	WIRING HARNES, HYDRAULIC P	1		
23	89	68258	STARTER SOLENOID	1		
24	13	26996	LOCKWASHER, STARTER SOLE	2		
25	11	68219	NUT, STARTER SOLENOID TERM	2		
26	13	26993	LOCKWASHER, STARTER SOLE	2		
27	11	68292	NUT, STARTER SOLENOID TERM	2		
28		46265	BOOT, RUBBER - STARTER SOLI	2		
29	10	69052	SCREW, STARTER SOLENOID TI	2		
30	13	26992	LOCKWASHER, STARTER SSOLE	2		
31	11	21825	NUT, STARTER SOLENOID SCRE	2		
32		74407	BRACKET, MOUNTING - STARTE	1		
33	10	21140	SCREW, MOUNTING BRACKET T	2		
34	13	26992	LOCKWASHER, MOUNTING BRA	2		
36	11	24656	NUT, MOUNTING BRACKET TO F	1		
--		55642A 7	CONTROL PANEL ASSEMBLY, CC	1		
37		55642A 1	PANEL ASSEMBLY, CONTROL	1		
38	16	55422	STUD, CONTROL PANEL TO BC	4		
39	12	24676	WASHER, CONTROL PANEL S	4		
40	11	27164	NUT, CONTROL PANEL STUD	4		
41		55728A 1	SWITCH, PUSH BUTTON, COM	2		