



2514

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		45060A 7	HYDRAULIC PUMP ASSEMBLY	1		
2	25	21720	O RING-Pump to Control Valve	4		
3	10	46918	VENT SCREW	1		
4	13	46917	LOCKWASHER-Vent Screw	1		
5	10	28634	FILLER SCREW	1		
6	12	20260	WASHER-Sealing-Filler Screw	1		
7		45325	CONNECTOR AND HARNESS	1		
8		45559	TERMINAL BLOCK-Hydraulic Pump	1		
9	10	35519	SCREW- Terminal Block to Hydraul	2		
10	10	30663	SCREW-Harness Leads to Termina	2		
11		45382A 1	CONTROL VALVE ASSEMBLY	1		
NS	25	21720	O RING- Hydraulic Pump to Contr	4		
12	22	38609	PLUG-Control Valve (3/8-24 IN.)	1		
13	10	21091	SCREW-Control Valve to Hydraulic	4		
14	13	26992	LOCKWASHER-Control Valve Scre	4		
15	38	55823	DECAL-Oil Instructions-Hydraulic Pl	1		
16	16	21831	STUD-Hydraulic Pump to Mounting	3		
17	11	35814	NUT-Hydraulic Pump Stud	3		
18		46306	BRACKET-Mounting-Hydraulic Pump	1		
19	10	26066	SCREW-Hydraulic Pump Mounting	3		
20	12	20546	WASHER-Hydraulic Pump Mounting	3		
21	11	35814	NUT-Hydraulic Pump Mounting Bra	3		
22		25661	STARTER SOLENOID	1		
23	13	26996	LOCKWASHER-Starter Solenoid Ter	2		
24	1173	20645	NUT-Starter Solenoid Terminal (#1)	2		
25	13	26993	LOCKWASHER-Starter Solenoid Ter	2		
26	11	20083	NUT-Starter Solenoid Terminal (5/1	2		
27		46265	BOOT-Rubber-Starter Solenoid Ter	2		
28		45321	BRACKET-Mounting-Starter Soleno	1		
29	10	34290	SCREW-Starter Solenoid to Mounti	2		
30	13	26992	LOCKWASHER-Starter Solenoid Sc	2		
31	11	21825	NUT-Starter Solenoid Screw	2		
32	10	21140	SCREW-Mounting Bracket to Hydr	2		
33	13	26992	LOCKWASHER-Mounting Bracket	2		
34	13	27660	LOCKWASHER-Hydraulic Pump Th	1		
35	11	20645	NUT-Mounting Bracket to Hydraulic	1		
-		55900A 2	CONTROL PANEL ASSEMBLY	1		
36		55900	CONTROL PANEL	1		
37	10	32866	SCREW-Control Panel to Dashbo	4		
38	11	20190	NUT-Control Panel Screw	4		
39		54211	IGNITION SWITCH Control Panel	1		