



2512

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		55883A	2 TRANSOM PLATE ASSEMBLY	1		
2	26	46370	OIL SEAL, Transom plate - Water	1		
3		38371	SEAL, Exhaust - Transom plate	1		
4	25	31144	DRING - Exhaust cover	1		
4A	26	45577	SEAL - Quad ring	3	(Serial # 3225968 and up)	
5		55884	COVER, Exhaust- Transom plate	1		
6	10	38870	SCREW, Exhaust cover to transom	15		
7	11	34688	Nut, Exhaust cover screw	14		
8	28	38234	NAME PLATE, Transom plate	1		
9	10	22290	SCREW, Drive - Name plate to transom	2		
10	22	58355	COUPLING, Transom plate - Water	1		
11	10	38245	SCREW, Flywheel housing to transom	1		
12	12	38246	WASHER, Fiber - Flywheel housing	2		
13	23	38247	SLEEVE, Flywheel housing screw	1		
14	11	38248	NUT, Flywheel housing screw	1		
15	10	22659	SCREW, Sender housing to transom	1		
16	23	31866	SPACER, Sender housing screw	1		
17	12	39143	WASHER, Sender housing screw	2		
18	11	20361	NUT, Sender housing screw	1		
19	16	20353	STUD, Shift cable to transom plate	1		
20	23	31866	SPACER, Shift cable stud	1		
21	12	39143	WASHER, Shift cable stud	2		
22	11	20361	NUT, Shift cable stud	1		
23	32	38186	TUBE, Steering cable guide	1		
24	12	38239	WASHER, Fiber - Steering cable guide	2		
25	23	38684	SLEEVE, Steering cable tube - transom	1		
26	11	37984	NUT, Steering guide cable tube	2		
27		49704A	1 LEVER ASSEMBLY, Shift cable - transom	1		
28	16	20789	STUD, Shift cable to lever (1 3/8")	1		
29	12	39143	WASHER, Shift lever stud	1		
30	11	20361	NUT, Shift lever stud	1		
31	16	32698	STUD, Shift lever cable to transom	1		
32	23	31758	SPACER, Shift cable lever stud	1		
33	12	26825	WASHER, Shift cable lever stud	2		
34	11	35814	NUT, Shift cable lever stud	1		
35	16	34069	STUD, Sender housing to shift cable	1		
36	23	31866	SPACER, Sender housing stud	1		
37	12	39143	WASHER, Sender housing stud	2		
38	11	20361	NUT, Sender housing stud	2		