



DISTRIBUTOR AND IGNITION COMPONENTS

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		805185A29	DISTRIBUTOR ASSEMBLY	1		
2		805759T 2	CAP ASSEMBLY	1		
3	27	805760	GASKET-Distributor Cap	1		2
4	10	848523	SCREW (#10-32 x .812)	4		
5	12	30164	WASHER	4		
6		13524A 8	WHEEL ASSEMBLY-Rotor Sensr	1		1
7	10	66686	SCREW	1	(#10-32 x 1.00)	
7	10	72202	SCREW	1	(#10-32 x 1.250)	
8	13	26996	LOCKWASHER (#10)	2		
9	87	861780Q 4	SENSOR ASSEMBLY	1		
10	53	90916	RING-Retaining	1		
11	25	23145	O RING	1		2
12	12	90931	WASHER-Thrust	1		
13	43	818807 1	GEAR-Drive	1		
14	17	47617	PIN-Roll	1		
15		806334	SHAFT	1		
16		52185	CLAMP	1		
17	12	856774	WASHER	1		
18	10	805559	SCREW (.375-16 x .875)	1		
19	27	34486 3	GASKET	1		2
20	37	92155	DECAL-Distributor Cap	1	(Firing Order)	
21	33	849704	SPARK PLUG	8		
22	84	93529A51	CABLE SET-Ignition	1	(Blue)	
23		54676	RETAINER (2 Wire)	2		
24		32783	RETAINER (3 Wire)	2		
25		32784	RETAINER (4 Wire)	4		
26	13	26996	LOCKWASHER (#10)	2		
27	11	68219	NUT (#10-32)	2		
28	13	26996	LOCKWASHER (#10)	1	(Ground Wire)	
29	11	68219	NUT (#10-32)	1	(Ground Wire)	
30		848253	COVER-Distributor	1		
-	27	840277A 1	GASKET SET-Engine Overhaul	1		