


- A - Audio Warning System**
 - 1 - Oil Pressure Switch
 - 2 - Transmission Fluid Temperature Switch
- B - Instrumentation System**
 - 1 - Oil Pressure Sender
 - 2 - Water Temperature Sender
- C - Charging And Starting System**
 - 1 - Alternator
 - 2 - Ground Stud
 - 3 - starter
 - 4 - Circuit Breaker
 - 5 - Starter Slave Solenoid
 - 6 - Neutral Safety Switch
- a - Herness Connector
- b - Positive (-) Power Wire to EFI Harness
- c - Audiotek Tachometer Lead

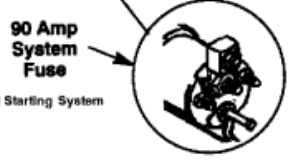

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	807677A 2	WIRING HARNESS-ENGINE	1		