



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		805082A 1	ADAPTOR ASSEMBLY	1		
2	31	815900	BEARING	1		
3	31	87156	BEARING-ROLLER	1		
4	23	87560091	BEARING-THRUST	AR	(.091 THICK-RED)	6,7
4	23	87560094	BEARING-THRUST	AR	(.094 THICK-LIGHT BLUE)	6,7
4	23	87560097	BEARING-THRUST	AR	(.097 THICK-GREEN)	6,7
5	31	86771	BEARING-THRUST	2		
6		97351	KEEPER	2		4
7	23	86770	COLLAR-THRUST	1		
8	45	812773T	DRIVESHAFT-UPPER	1		
9	43	818665A 3	GEAR	2	(30 TEETH) (1.65:1 RATIO) (S/N	
9	43	826643A 3	GEAR	2	(32 TEETH) (1.50:1 RATIO) (32 T	1
9	43	815662A 5	GEAR	2	(29 TEETH) (1.36:1 RATIO) (1.81:	
10	31	86768A 2	BEARING ASSEMBLY-THRUST	1		
11	52	807375A 3	CLUTCH ASSEMBLY	1		
12	24	818829	SPRING	2		
13		92068A 6	COVER-TOP	1		7
14	25	97387	O-RING	1		7,4
15	31	815900	BEARING	1		7
16	31	87156	BEARING-ROLLER	1		7
17	10	98794	SCREW (3/8-16 X 1 IN.)	4		7
18	11	97522	NUT (5/8-18)	1		
19	12	44539	WASHER	1		
20	43	818664	GEAR-PINION	1	(23 TEETH) (1.65:1 RATIO) (S/N	
20	43	826642T	GEAR-PINION	1	(27 TEETH) (1.50:1 RATIO) (27 T	1
20	43	815661T	GEAR-PINION	1	(27 TEETH) (1.36:1 RATIO) (1.81:	
21	31	86763A 2	BEARING-TAPERED ROLLER	1		
22		86780	RING-SEALING	1		
23	25	97386	O-RING	1		4
24	12	41613	WASHER	1		
25		86779A 1	CARRIER ASSEMBLY	1		
26	26	807006	SEAL-OIL	1		4
27	11	92004	RING NUT	1		
28		12784A10	UNIVERSAL JOINT ASSEMBLY	1		
29		59830A 7	YOKE ASSEMBLY (COUPLER EI	1		
30	25	29845	O-RING	2		4
30	25	35027	O-RING (1.046 I.D.)	1		4
31		39383T	SOCKET-CENTER	1		
32		75832 1	CROSS AND BEARING	2		1
33		12784T	YOKE (GEAR END)	1		
36		16709A 2	SEAL KIT	1		